

Brickcom

Network Camera

Brickcom Software User's Manual

For Firmware release V3.2.0.0

Brickcom Matrix

CB-Series

CB-500Ap

FB-Series

FB-500Ap



Product name: Network Camera v3.2.0.0

Release Date: 2011/7

Manual Revision: V2.1

Web site: www.brickcom.com

Email: technical@brickcom.com

info@brickcom.com

©2011 Brickcom Corporation. All Rights Reserved

Feature		Mode name
Live View		(*)
Camera/Video/Audio	Camera	(*)
	Video	(*)
	Audio	(*)
	Multicast	(*)
	Privacy Mask Control (*)	CB- Series Professional
Camera Control	Preset Point	
	Privacy Mask	
	Patrol Settings	
Network	IP Settings	(*)
	UPnP	(*)
	EasyLink	(*)
	Wireless	Wireless-Series
	HTTP/HTTPS	(*)
Event	Event Settings	(*)
	Motion Detection	(*)
	PIR(*)	CB- Series Professional
	Audio Detection	CB- Series Professional
Notifications	FTP Settings	(*)
	E-mail Settings	(*)
	Samba Settings	(*)
	HTTP Settings	(*)
	Digital Output (DO)	FB-Series OB-Series

		FD-Series VD-series VS series
	Video Clip	
	Audio Clip(*)	CB- Series Professional
	LED Light(*)	CB- Series Professional
System	System Log	(*)
	Date and Time	(*)
	Device Information	(*)
	Storage Management	FB-Series Professional OB-Series Professional FD-Series Professional VD-series Professional VS series Professional
	LED Indicators	(*)
Maintenance	User Management	(*)
	Language	
	IP Filter	
	Firmware Upgrade	
	Configuration	
	Reset to Default	
	Reboot	

(*)All Series on matrix

Table of Contents

Feature	3
Mode name.....	3
Live View	3
(*).....	3
Camera/Video/Audio.....	3
Camera.....	3
(*).....	3
Video	3
(*).....	3
Audio	3
(*).....	3
Multicast	3
(*).....	3
Privacy Mask Control (*)	3
CB- Series Professional.....	3
Camera Control	3
Preset Point	3
Network	3
IP Settings	3
(*).....	3
(*).....	3
(*).....	3
Wireless-Series.....	3
(*).....	3
Event	3
Event Settings.....	3
(*).....	3
(*).....	3
CB- Series Professional.....	3
CB- Series Professional.....	3
Notifications	3
(*).....	3
(*).....	3
Samba Settings	3
(*).....	3
(*).....	3


FB-Series.....	3
OB-Series.....	3
CB- Series Professional.....	4
CB- Series Professional.....	4
System.....	4
System Log.....	4
(*).....	4
(*).....	4
(*).....	4
FB-Series Professional	4
OB-Series Professional.....	4
(*).....	4
Maintenance	4
User Management	4
(*).....	4
Authentication	8
Installing the Plug-In	9
Live View.....	10
Configuration	14
Camera/Video/Audio.....	14
Camera	14
Video	17
Audio.....	20
Click Apply to apply settings or Cancel to cancel changes.....	22
Multicast	22
Privacy Mask Control	23
Camera Control(*).....	24
Preset Point	24
Privacy Mask	25
Patrol Settings	26
Network	27
IP Settings	27
UPnP	30
EasyLink™	33
Wireless(*)	35
HTTP/HTTPS	42
Event.....	44
Event Settings	44

Motion Detection	48
PIR(*)	49
Audio Detection	50
Notifications	51
FTP Settings	51
E-mail Settings	52
Samba Settings	53
HTTP Settings	54
Digital Output (DO) (*)	55
Video Clip	56
Audio Clip(*)	57
LED Light(*)	58
System	59
System Log	59
Date and Time	61
Device Information	62
Storage Management (*)	65
LED Indicators	67
Maintenance	68
User Management	68
Language	69
IP Filter	69
Firmware Upgrade	70
Configuration	70
Reset to Default	72
Reboot	72




Authentication


To access the camera's live view, open a web browser and enter the IP address of the camera. A dialog window will pop requesting a username and password. As stated on the previous page, for the default username and password for the Administrator are assigned as "**admin/admin**". For accounts other than the administrator's account, the user can choose to remember the password for future convenience. It is not recommended to check this box when viewing the camera feed from a public computer.

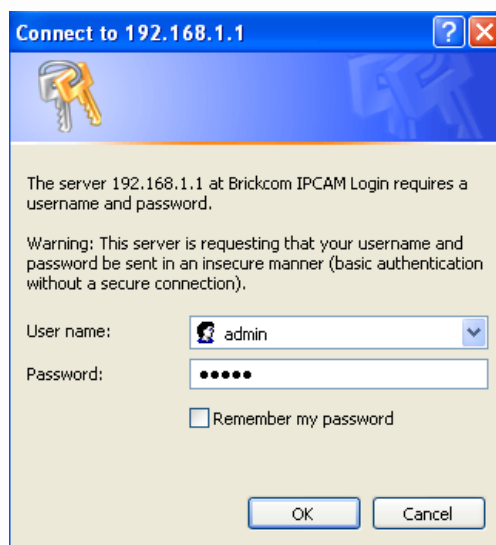


Installing the Plug-In

For the initial access to the camera in Windows, the web browser may prompt the administrator for permission to install a new plug-in for on Internet Explorer. Permission request depends on the Internet security settings of the user's PC or notebook. If the highest security level is set, the computer may prohibit any installation and execution attempt. This plug-in has been registered for certificate and is used to display the video in the browser. Click on  to proceed. If the web browser does not allow the administrator to continue the installation, check the Internet security option and lower the security levels or contact the networking supervisor or IT for help.



 **NOTE** – If an error occurred or the plug-in fails to install, it is because the version of the Electronic Signature is newly released and the VeriSign has not been submitted to Microsoft Windows update for validation. Therefore, plug-in will not have its root certificate. If IE discovers that there is no root certificate after the user's PC connects to the camera, it will automatically redirect to VeriSign Web site to download and install the latest root certificate to make the installation successfully. If the user's computer is able to connect to camera but unable to access the internet, then the installation will fail because the computer will not be able to download the latest root certificate. This problem can be resolved if computer can be connect to the internet and the camera at the same time and will not recur when Windows update patches become available.

Live View

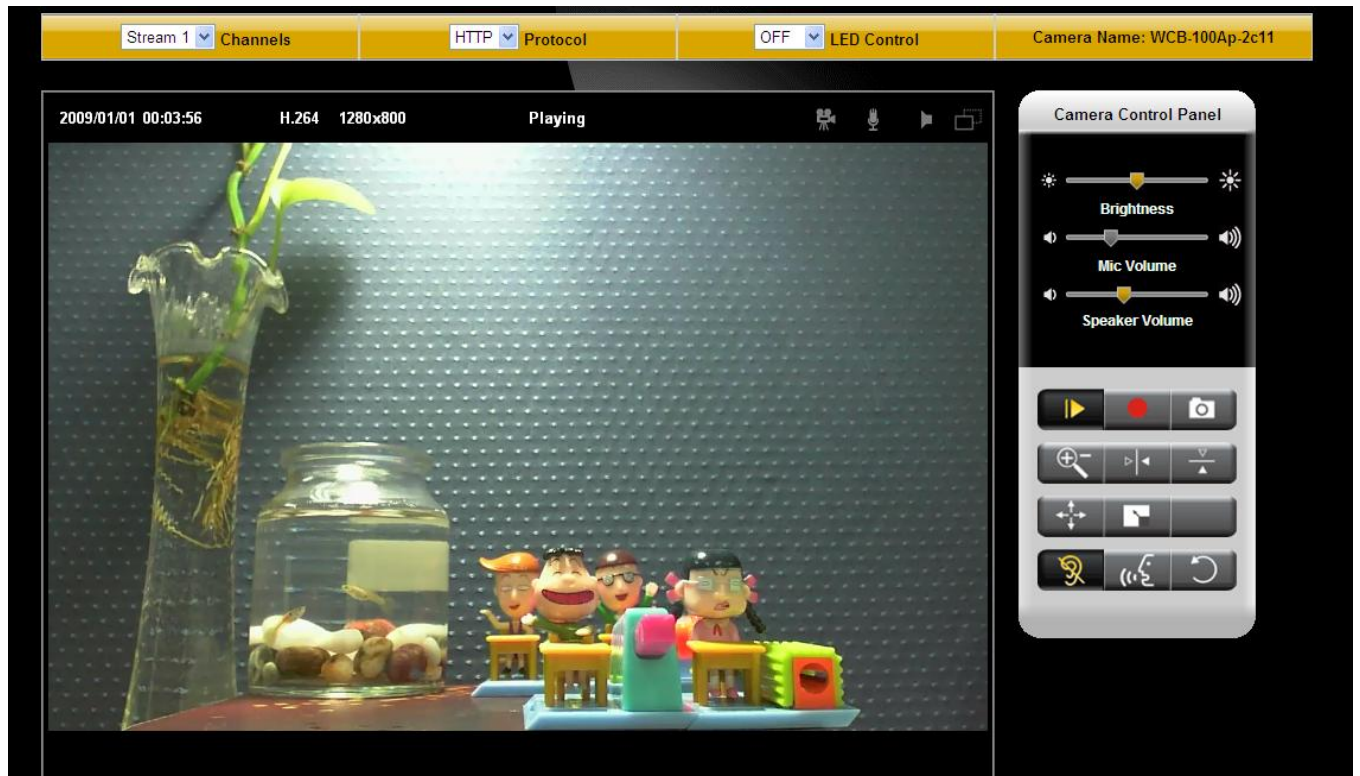

! **NOTE** - (*) These are optional features. Please refer to the Product List for the full list of optional features available for the product.

Live View is the default page that opens when accessing the camera. Live video is displayed directly in the browser window.

- ***Stream1/Stream2 Channels***

The network camera offers simultaneous dual stream for optimized quality and bandwidth. Go to Configuration → Camera/Video/Audio → Video to configure the codec compression and video resolution or refer to the Video configuration page.

- ***HTTP/TCP/UDP protocol***

HTTP – This unicast method can be used to traverse firewalls. Firewalls are commonly configured to allow the HTTP protocol, thus allowing RTP to be tunneled.

TCP - This protocol guarantees the complete delivery of streaming data and provides better video quality. The downside of using this protocol is that the quality of its real-time effect is less than that of the UDP protocol.

UDP - This protocol allows for more real-time audio and video streams. However, network packets may be lost due to network burst traffic and images may be broken. Activate UDP connection time-sensitive responses are more important than video quality.

LED Control(CB-series Professional only) – Use the drop-down menu to adjust the brightness of the camera's LED.



 
Recording on/off - Displays the status of recording video



MIC on /off - Displays the status of the MIC volume



Speaker on/off - Displays the status of the Speaker



MD on/off - Displays the status of Motion Detection

- **Brightness** - Drag the slider bar to adjust the image brightness level.
- **Mic volume** - Drag the slider bar to adjust the microphone volume.
- **Speaker volume** - The built-in speaker will play sound from an audio clip from the computer microphone when it is enabled.

For more Audio settings, please refer to the Audio configuration page.



Player Stop - Play or stop the video.



Recording - Record video to a computer.



Snapshot - Capture and save still images.



Digital Zoom - Enable the digital zoom operation.



Mirror - Horizontally reflect the display of the live video.



Flip - Vertically reflect the display of the live video.



Real Size - View the object in real size. Press it again to switch back to normal mode.



Full Screen - Switch to full screen mode. Press the “Esc” key to return to normal mode.



Motion Detection Alert - Enable the motion detection alert function.



Mute – Turn off the sound.



Talk(*) – To communicate through the camera using the computer MIC.



Set Default – Reset to default settings.

PTZ Control(OSD-040,PT-040 only).



Patrol - Enable the patrol function. If a designated patrol has not been set for that time period, the first patrol group on the patrol list will be enabled.



Pan/Tilt Control - Click on the arrows to pan and tilt the camera. Click the center of icon to return to the home position.




Joystick Mode – Scroll over the live view window to move the camera view in the direction of the mouse pointer.



Center Mode - Click on a point in the live view window to center the camera view on that point.



Edit the live view snapshot and video clip saved file folders.

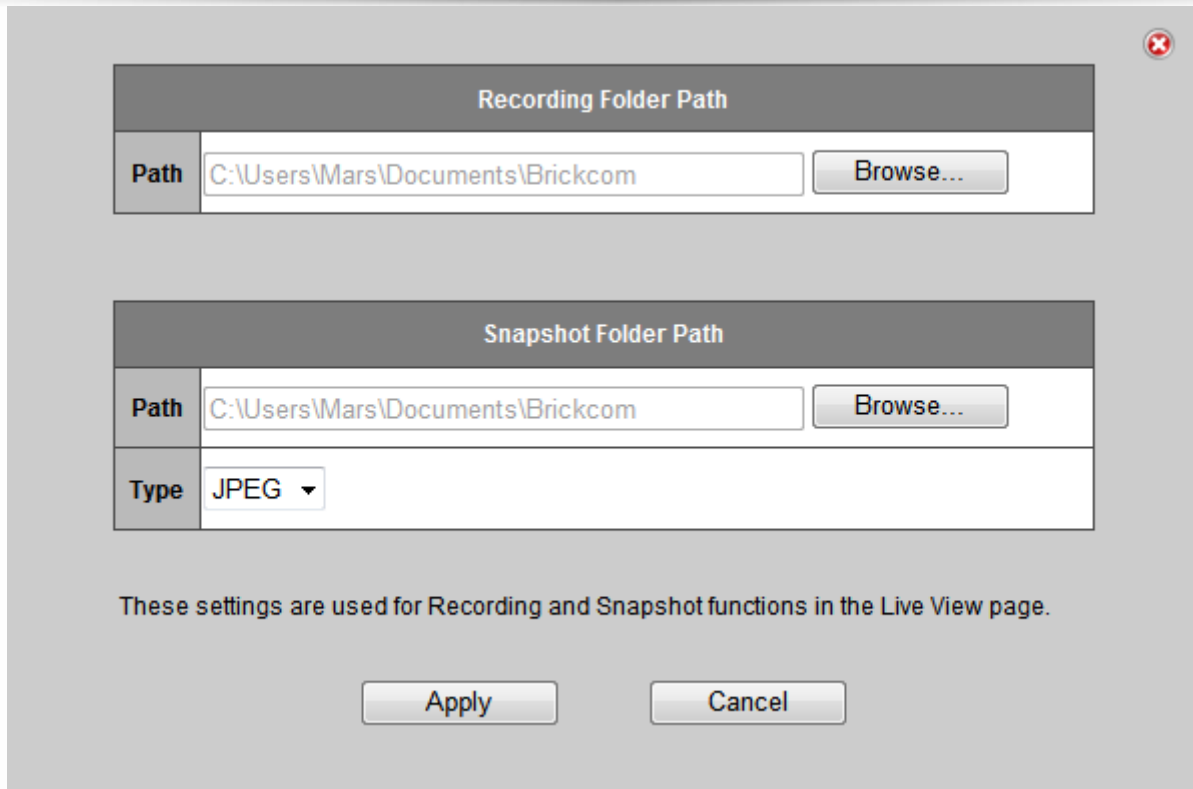

The screenshot shows a dialog box titled "Recording Folder Path" and "Snapshot Folder Path". It contains two sections for setting paths and a "Type" dropdown menu. The "Recording Folder Path" section has a "Path" field with the value "C:\Users\Mars\Documents\Brickcom" and a "Browse..." button. The "Snapshot Folder Path" section has a "Path" field with the same value and a "Browse..." button, and a "Type" dropdown menu set to "JPEG". Below the sections is a note: "These settings are used for Recording and Snapshot functions in the Live View page." At the bottom are "Apply" and "Cancel" buttons.

Recording Folder Path	
Path	C:\Users\Mars\Documents\Brickcom <input type="button" value="Browse..."/>

Snapshot Folder Path	
Path	C:\Users\Mars\Documents\Brickcom <input type="button" value="Browse..."/>
Type	JPEG ▾

These settings are used for Recording and Snapshot functions in the Live View page.

Recording folder path - The destination for saving the recording video files. Click Browse to specify the saving path.


Snapshot folder path - The destination for saving the snapshot files. Click Browse to specify the saving path and select the format from the drop-down menu.

 **NOTE**

1. The <Camera Control Panel> functions have no effect on the recorded video. Whatever changes are made to the <Camera Control Panel> **will not** be applied to the recorded video.


Configuration

Click <Configuration> on the main page to change the camera settings pages.

 **NOTE** - Only Administrators can access the Configuration page.

Camera/Video/Audio

Camera

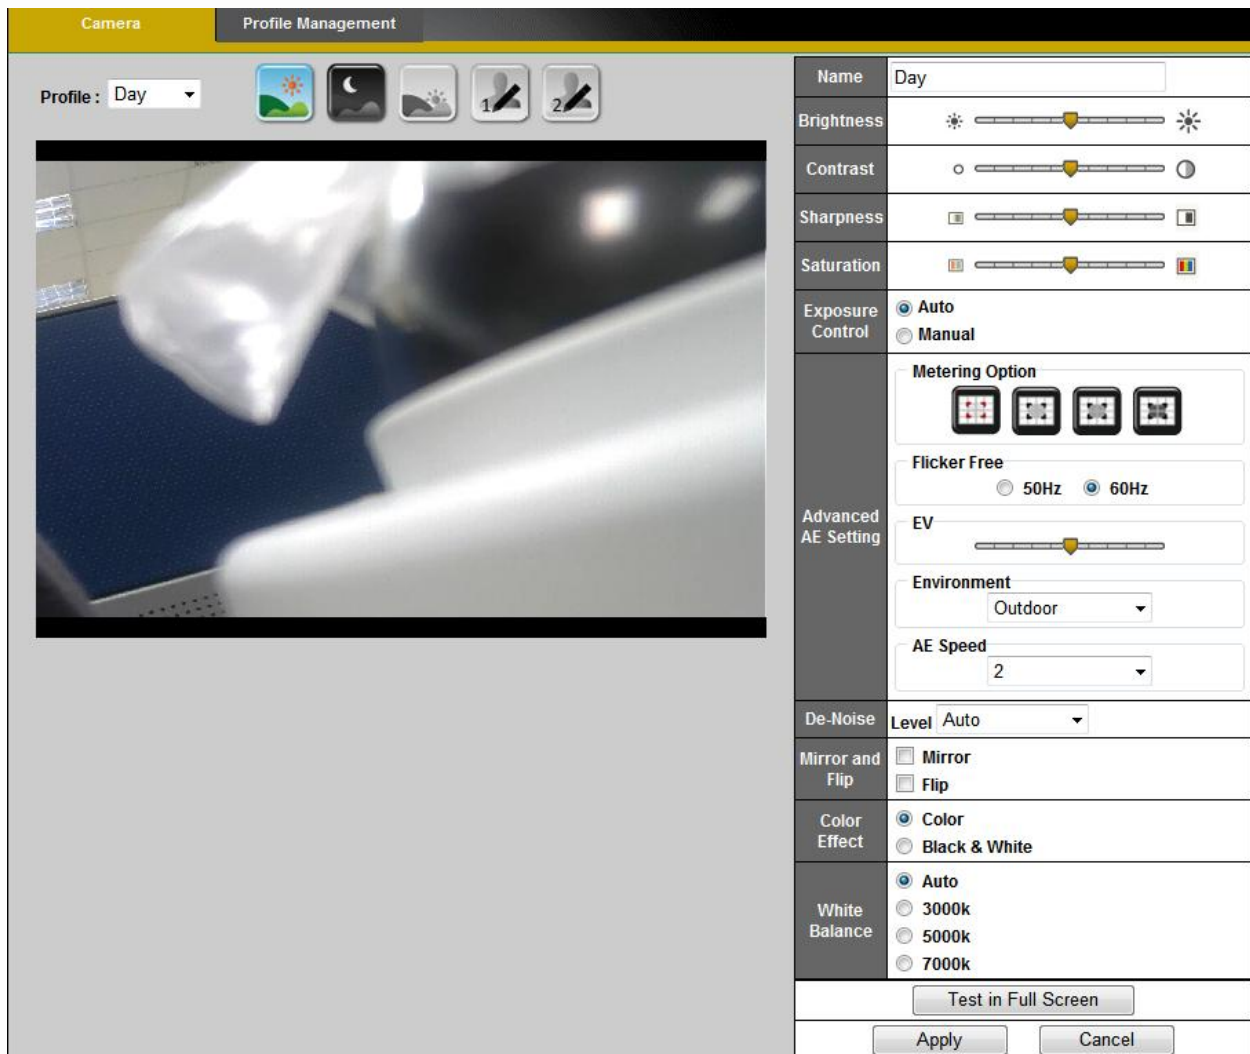

Name	Day
Brightness	<input type="range"/>
Contrast	<input type="range"/>
Sharpness	<input type="range"/>
Saturation	<input type="range"/>
Exposure Control	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
Advanced AE Setting	Metering Option <input type="radio"/> [Icon] <input type="radio"/> [Icon] <input type="radio"/> [Icon] <input type="radio"/> [Icon]
	Flicker Free <input type="radio"/> 50Hz <input checked="" type="radio"/> 60Hz
	EV <input type="range"/>
	Environment Outdoor
	AE Speed 2
De-Noise Level	Auto
Mirror and Flip	<input type="checkbox"/> Mirror <input type="checkbox"/> Flip
Color Effect	<input checked="" type="radio"/> Color <input type="radio"/> Black & White
White Balance	<input checked="" type="radio"/> Auto <input type="radio"/> 3000k <input type="radio"/> 5000k <input type="radio"/> 7000k
Test in Full Screen	
Apply Cancel	

Profile – Up to five profiles can be created for different lighting environments. Day and night are default profiles and users can create up to three additional profiles. Select a profile from the drop-down menu or select different icons to change profile settings.

Name – Profile Name

Brightness - Drag the bar to adjust the image brightness level from -5 to +5.

Contrast - Drag the bar to adjust the image contrast level from -5 to +5.

Sharpness - Drag the bar to adjust the image sharpness level from -5 to +5.

Saturation - Drag the bar to adjust the image saturation level from -5 to +5.

Exposure Control

Auto: The camera will automatically control exposure.

Manual: Select this option to define the exposure manually

Metering Option—Center-weighted average metering.

Flicker-Free – Eliminates the problem of flicker.

Environment—Select outdoor or indoor mode based on the conditions.

AE Speed—Automatically control exposure speed.

De-Noise –The De-noise can be set between 1 to 3, with 3 giving the best video resolution.

Auto - The camera will automatically filter the frame-to-frame defects to reduce the

Mirror and Flip

Mirror - Enable to horizontally reflect the display of the live video.

Flip - Enable to vertically reflect the display of the live video.

visual impact of blur.


IR Cut (*)(Only available with models with a IR Cut)— Deactivate or activate the IR cut filter

Color Effect - Select to display color or black and white video streams.


White Balance: White balance is a camera setting that adjusts for lighting in order to make Black & white.

.


Profile Management : Profiles can be scheduled to change at scheduled times or under different lightening changes.

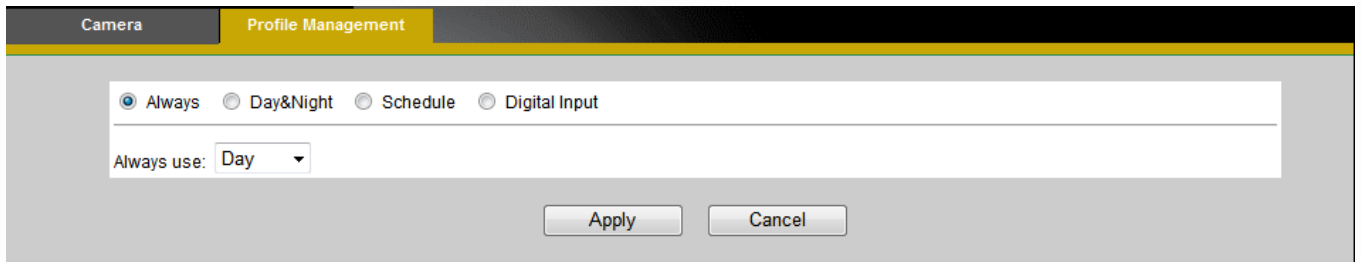


Always- Select Always to use a single profile. Select the profile from the drop down menu.

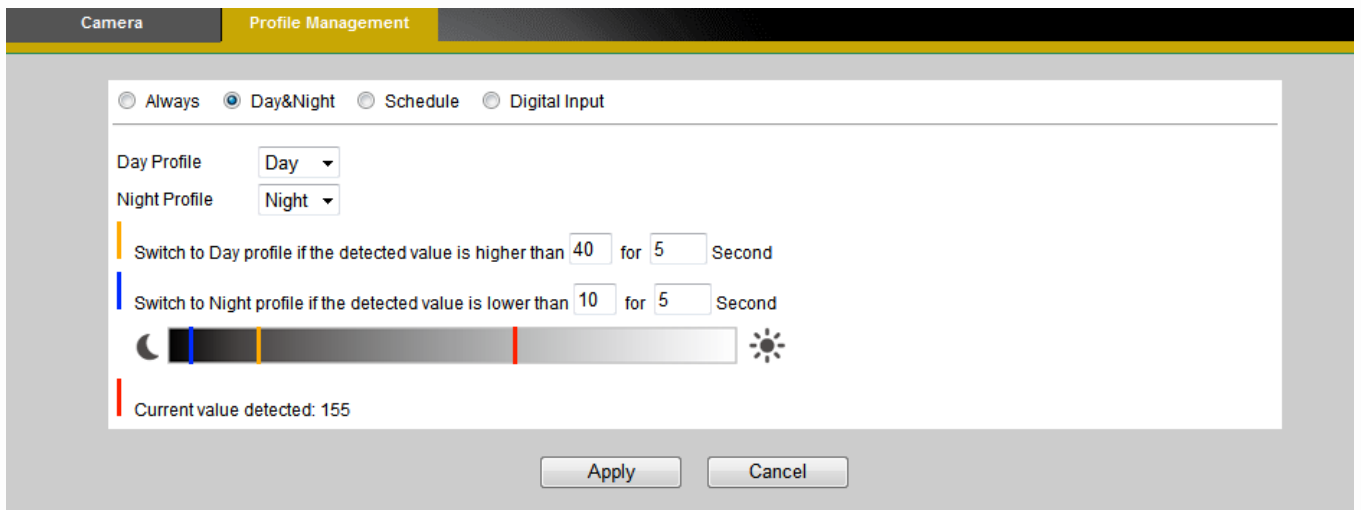

Day & Night (*) (Only available with models with a light sensor Mode)- Select Day & Night to schedule two profiles for day and night. Select profiles from the drop down menu for the Day and Night Profiles.

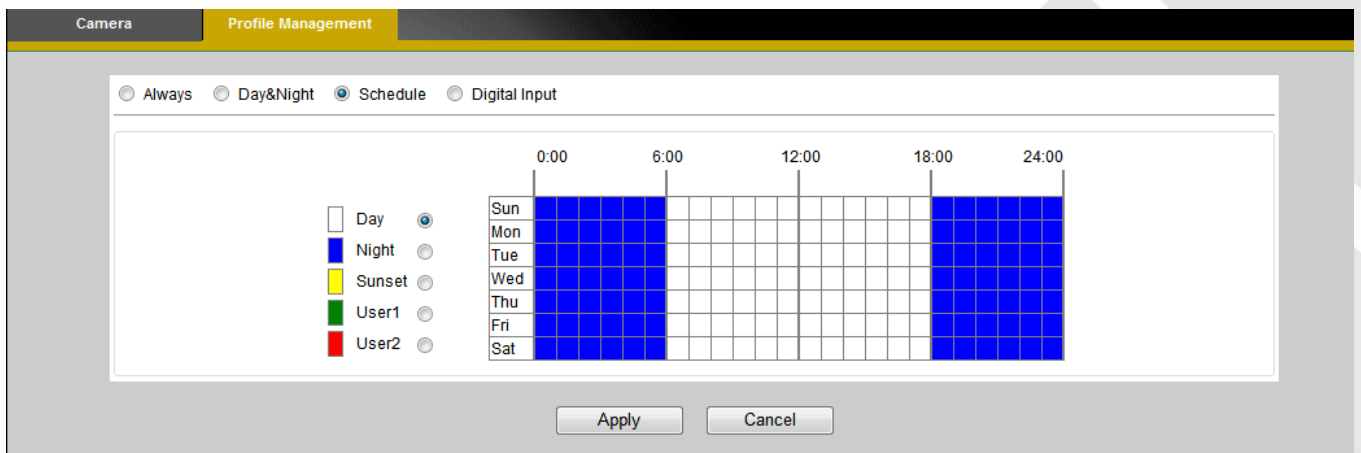

Schedule – Select Schedule to schedule specific time periods for different profiles.

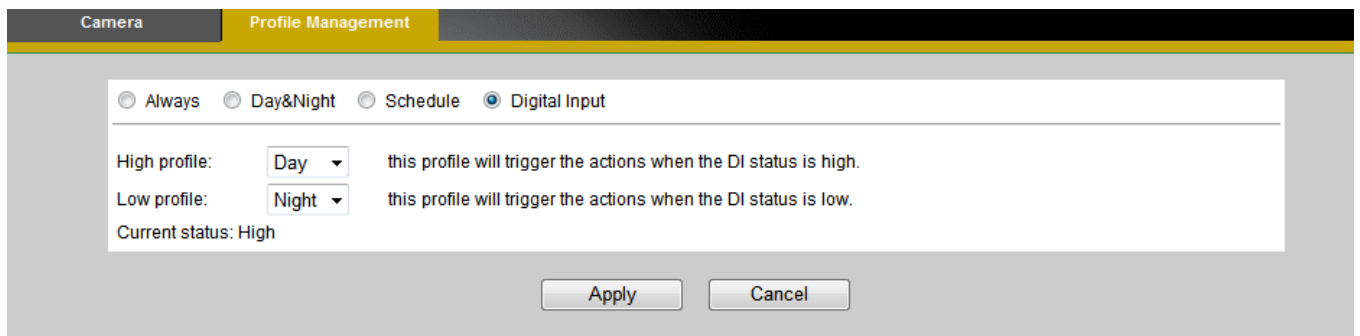

The screenshot shows the 'Profile Management' section of a camera's web interface. At the top, there are two tabs: 'Camera' and 'Profile Management'. Below the tabs, there are four radio buttons: 'Always', 'Day&Night', 'Schedule', and 'Digital Input'. The 'Digital Input' option is selected. Below the radio buttons, there are two dropdown menus: 'High profile:' with 'Day' selected and 'Low profile:' with 'Night' selected. To the right of these dropdowns, there are two lines of text: 'this profile will trigger the actions when the DI status is high.' and 'this profile will trigger the actions when the DI status is low.'. Below these dropdowns, it says 'Current status: High'. At the bottom of the form, there are two buttons: 'Apply' and 'Cancel'.

Digital Inputs (*) (Only available with models with a DI terminal)- Select Digital Input to have the profile management controlled by an external sensor. Select profiles from the drop down menu. Profiles will change according to different trigger voltage levels. Click **Apply** to apply settings or **Cancel** to cancel changes.

Video

The Network Camera offers two separate streams for different viewing options.

Stream		Video Overlay		RTSP Server	
Stream 1					
Video Codec	H.264				
Video Resolution	1920x1080				
Frame Rate	25				
Bitrate Mode	Constant Bitrate				
Bitrate	4000 Kbps. (64~12000)				
Quality	3				
Stream 2					
Enable	<input type="checkbox"/>				
Video Codec	MJPEG				
Video Resolution	1920x1080				
Frame Rate	15				
Bitrate Mode	Variable Bitrate				
Bitrate	64 Kbps. (64~12000)				
Quality	3				
Stream 3					
Enable	<input type="checkbox"/>				
Video Codec	H.264				

Stream 1, Stream 2 and Stream 3

Video Codec - The Network Camera offers three choices of video codec standards for real-time viewing: H.264, MPEG-4 and MJPEG.


Video Resolution - Select from the drop-down menu to choose the best resolution recording settings.


Frame Rate - Select the frame rate from drop-down menu. When H.264 or MJPEG is selected, the frame rate ranges from 1 to 30 fps. When MPEG-4 is selected, the frame rate ranges from 1 to 15 fps. Set a higher frame rate for smoother video quality.

Bitrate Mode – Select the bitrate mode from the dropdown menu. Select Variable Bitrate to manually configure the bitrate. Select Constant Mode to have the bitrate set by the video codec. Set the bitrate higher for better quality

Quality – Select MJPEG video codec to configure the video streaming using


Quality. The video quality can be set between Level 1 to Level 6, with Level 6 producing the best image quality.

 **NOTE** - a higher bitrate will use higher network bandwidth.

 **NOTE** – HTTP Transport is for non-IE browser used only.

Click **Apply** to apply settings or **Cancel** to cancel changes.

Video Overlay

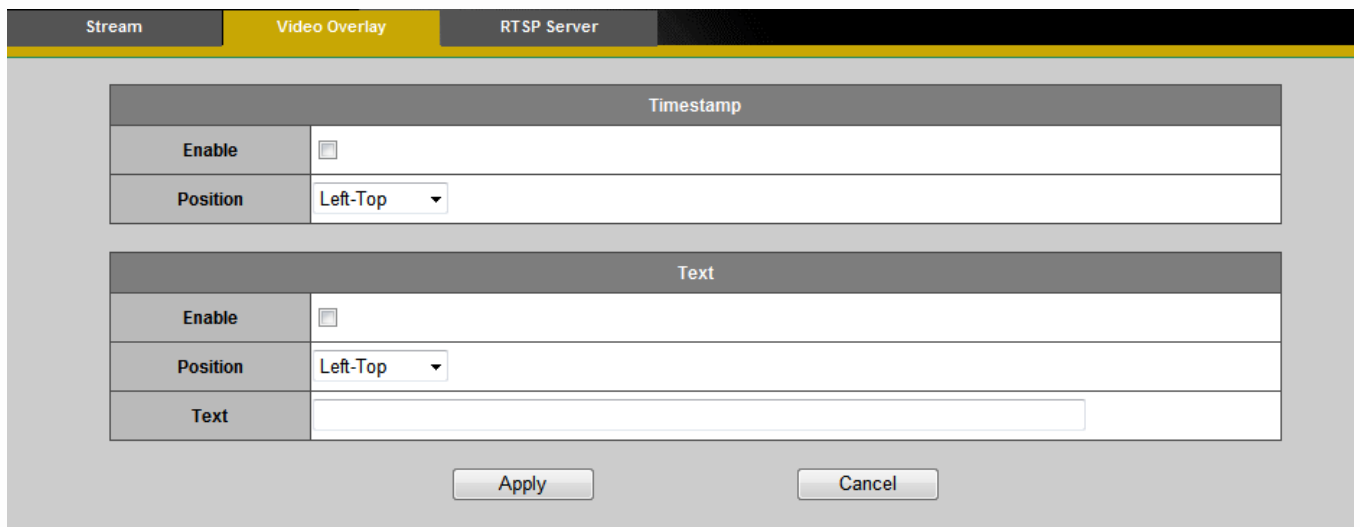

Timestamp	
Enable	<input type="checkbox"/>
Position	Left-Top

Text	
Enable	<input type="checkbox"/>
Position	Left-Top
Text	

Apply Cancel


Timestamp

To display the date and time on the screen during live view, check “Enable” to enable the timestamp function and select the display position from the drop-down menu.

Text

To make a note about the camera, check “Enable” and select the display position from the drop-down menu. Enter a video description in the text box.

Click **Apply** to apply settings or **Cancel** to cancel changes.

 **NOTE** - The video overlay will only takes effect in stream 1.

RTSP Server

RTSP Server	
Port	554
Authentication	NONE

RTP/RTCP	
RTCP Mode	Without SR

Apply Cancel

To utilize RTSP authentication, the user must first set a password for the camera. RTSP (Real-Time Streaming Protocol) controls the delivery of streaming media. By default the port number is set to 554.

Authentication - Depending on the network security requirements, the camera provides two types of security settings for streaming via RTSP protocol: NONE and DIGEST.

If DIGEST authentication is selected, user credentials are encrypted using MD5 algorithm, thus providing better protection against unauthorized access.

RTP/RTCP-

RTCP without SR - RTCP without SR (Sender Report) is the default option. Under this option, audio and video received from the IP camera are played immediately and independent of each other.

RTCP with SR - RTCP with SR option allows synchronization between video and audio on live viewing. Choose this option if audio and video become unsynchronized.

Click Apply to apply settings or Cancel to cancel changes.

Audio

The administrator can set up two separate streams for the camera for different viewing devices. The administrator can enable or disable the audio function on either stream. If audio enable is selected, select the Audio codec from the drop-down menu.

Stream 1	
Enable	<input type="checkbox"/>
Audio Codec	G.711

Stream 2	
Enable	<input type="checkbox"/>
Audio Codec	G.711

Stream 3	
Enable	<input type="checkbox"/>
Audio Codec	G.711

Apply Cancel

Advanced Settings

Camera MIC	
Volume	-0db

Camera Speaker	
Enable	<input checked="" type="checkbox"/>
Volume	50%

Echo Cancellation	
Enable	<input type="checkbox"/>

Apply Cancel

Camera MIC - The Network Camera supports two-way audio communication so that operators can transmit and receive audio simultaneously. By using the Network Camera 's built-in microphone and an external speaker, users can communicate with people who are within range of the Network Camera.

Camera Speaker – If the speaker is enabled, select the volume from the drop-down menu.

Echo Cancellation Enabled - Enable to avoid an echo.

Click **Apply** to apply settings or **Cancel** to cancel changes

Multicast

The screenshot shows a configuration window titled "Multicast" with a yellow header. It contains three sections for "Stream 1", "Stream 2", and "Stream 3". Each section has an "Enable" checkbox (currently unchecked) and a "Multicast Address" field with four sub-inputs (234, .1, .2, .3) and a "Port" field. Stream 1 and Stream 3 have a port of 10000, while Stream 2 has a port of 20000. At the bottom are "Apply" and "Cancel" buttons.

Multicast sends a video stream to the multicast group address and allows multiple clients to acquire the stream at the same time by requesting a copy from the multicast group address. Therefore, multicast can effectively save Internet bandwidth. The RTSP (Real-Time Streaming Protocol) controls the delivery of streaming media.

Click "Enable" to enable Multicast stream 1 or Multicast stream 2. The default value for multicast address and port are 234.1.2.3 and 10000. Use different port number for different streams. It is recommended to use the default values.


 **NOTE** - Using the IP address of the Network Camera enables access to the video.

Example: `rtsp://192.168.1.1/channel1`

Click **Apply** to apply settings or **Cancel** to cancel changes.

Privacy Mask Control

The Cube camera is equipped with a privacy feature which allows users to mask the camera's live view. A black screen will be displayed in place of the live view window. This application is particularly useful when the camera is being used for home surveillance. With the privacy button, the user can have privacy while they are going about their daily life.

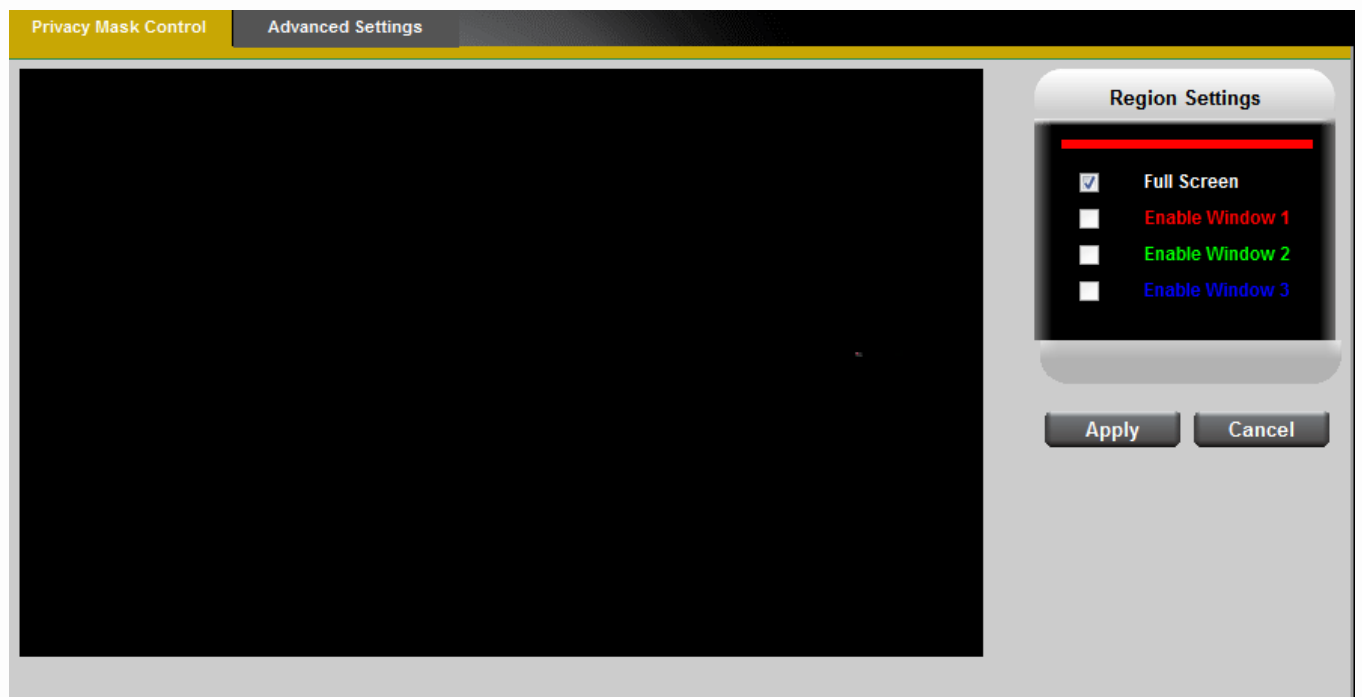

Privacy Mask Control –Enable the Privacy Mask control to remotely disable live view and recording from the camera. Configure the privacy windows for up to three individual windows or for the full screen.


Advanced Settings.

Hardware Privacy Mask Button(CB-Series Professional only) – Click to enable the privacy mask button on the camera. If this feature is not enabled, the user will not be able to use the privacy mask button.

Click **Apply** to apply settings or **Cancel** to cancel changes.

Camera Control(*)

Preset Point

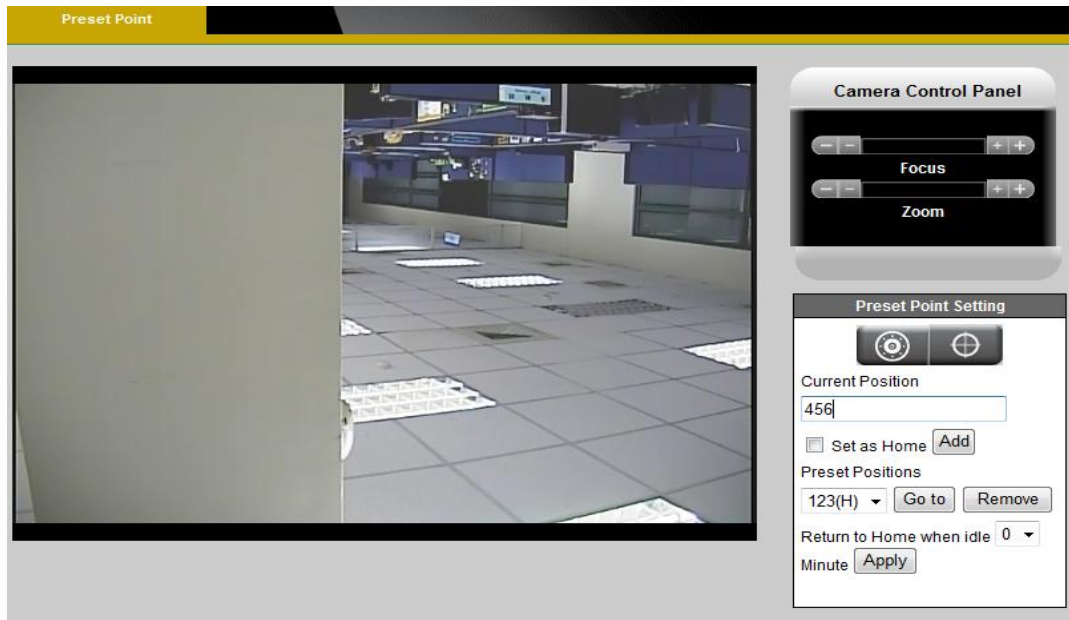

A preset position is a pre-defined camera view that can be used to quickly move the camera view to a specific location. To create a preset position:

- Use the Pan, Tilt and Zoom (PTZ) controls to steer the camera view to the required position.
- Enter a descriptive name under Current Position and click **Add**.
- The camera position and focus settings will be saved as a preset position.



NOTE – A total of sixteen preset points can be set.

- Preset Positions can be assumed at any time by selecting the preset position's name from the available positions drop-down list. One position can be set as the **Home** position, which is readily accessible by clicking the **Home** button in the PTZ panel.



NOTE - The name of the preset point set as **Home** will have (H) added; for example, Gate (H).

- The camera can be configured to return to the **Home** position when the camera has been inactive for a specified length of time. Select the desired length of time from the drop-down menu and click **Apply**. Setting the time to zero prevents the camera from automatically returning to the Home position.

Privacy Mask

Privacy Mask Setting	
Index	Name
1	Door

Mask Name:

Privacy Mask Color: Magenta

Apply Cancel

Add / Edit Privacy mask A privacy mask can be created to conceal areas within the camera's view. The Privacy Mask List displays all the masks that are currently configured for the network camera and if they are enabled.



NOTE – A total of sixteen privacy masks can be created.

To create a new privacy mask:

- Use the Pan, Tilt and Zoom (PTZ) controls or select Preset Point from the drop-down menu to steer the camera view to the required position.
- Click on **Add**. A rectangle will appear on the center of the viewing window.
- Use the mouse to resize the privacy mask window.
- Enter a descriptive name in **Mask name**, choose a color from the **Privacy mask color** drop-down menu and click **Apply**.

To edit a privacy mask, select the mask and reshape, move or change the color as needed.

Patrol Settings

Description	Running
Morning	Stop

Description:

Preset Positions
123 <input type="button" value="▶"/>
456 <input type="button" value="▶"/>

Patrol Positions	Movement Speed	Viewing Duration	Delete
123 <input type="button" value="▲"/> <input type="button" value="▼"/>	0 [1..100]	0 Second	<input type="button" value="Delete"/>
456 <input type="button" value="▲"/> <input type="button" value="▼"/>	0 [1..100]	0 Second	<input type="button" value="Delete"/>

The camera can be set to patrol a group of preset points. For each patrol group, the user can configure the preset point order, movement speed, and viewing duration.

To create a patrol group:

- Click on **Add** and enter a descriptive name in **Description**.
- Add preset points to the patrol group by clicking the next to the desired preset point.
- Use the arrow buttons to change the order of the preset positions by using the Adjust the sequence of positions, and enter **Movement Speed** and **Viewing Duration** for each preset point.
- Click on **Apply** to save the patrol group.
- Enable a patrol set by clicking on **Start/Stop**.




NOTE

- A total of sixteen preset points can be assigned to a patrol group.
- A total of four patrol groups can be assigned to a network camera.

Network


IP Settings

This section explains how to configure a wired network connection for the camera. There are several ways to setup the camera over the Internet: (1) obtain an available dynamic IP address assigned by a DHCP server, (2) use a static IP, or use PPPoE (Point-to-point over Ethernet). Select the desire setup mode from the IP settings drop-down menu.

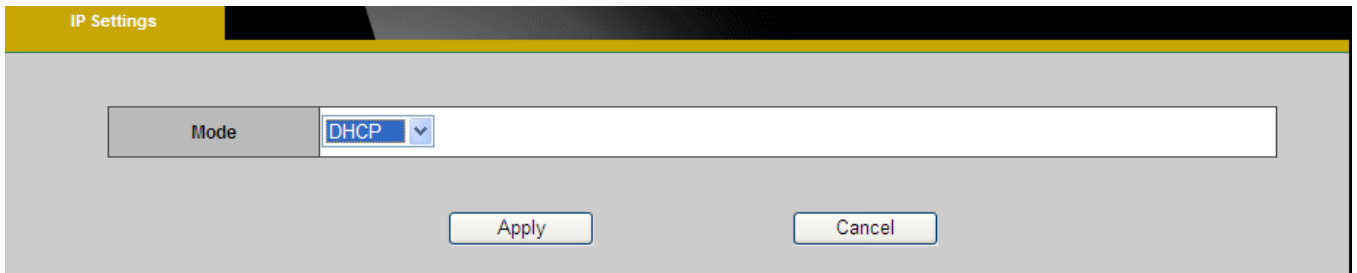

The screenshot shows the 'IP Settings' configuration page. At the top, there is a yellow header with 'IP Settings' on the left and a black bar on the right. Below the header, there is a 'Mode' dropdown menu with 'DHCP' selected. At the bottom, there are two buttons: 'Apply' and 'Cancel'.

1. **DHCP** –If this option is selected, the camera will automatically obtain an available dynamic IP address from the DHCP server each time it connects to the LAN.

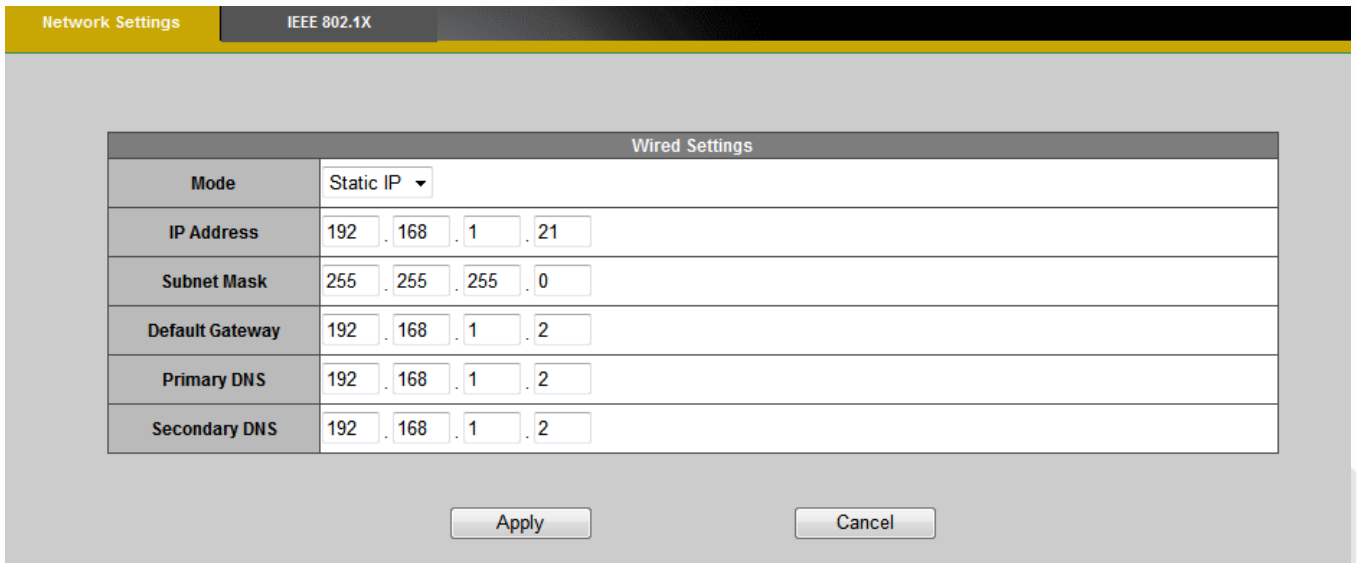

The screenshot shows the 'Network Settings' configuration page for 'IEEE 802.1X'. The 'Wired Settings' section is visible. It contains a 'Mode' dropdown menu set to 'Static IP'. Below it are several input fields for 'IP Address', 'Subnet Mask', 'Default Gateway', 'Primary DNS', and 'Secondary DNS'. Each field is a four-part input box. At the bottom, there are two buttons: 'Apply' and 'Cancel'.

Wired Settings				
Mode	Static IP ▾			
IP Address	192	. 168	. 1	. 21
Subnet Mask	255	. 255	. 255	. 0
Default Gateway	192	. 168	. 1	. 2
Primary DNS	192	. 168	. 1	. 2
Secondary DNS	192	. 168	. 1	. 2


2. **Static IP** - Select this option to manually assign a static IP address to the camera. Enter the static IP address, Subnet mask, Default Gateway, Primary and Secondary DNS provided by the ISP.

Network Settings IEEE 802.1X

Wired Settings

Mode	PPPoE
Username	<input type="text"/>
Password	<input type="text"/>

Apply Cancel

- 3. PPPoE** (Point-to-point over Ethernet): Use this mode if connecting to the Internet through a DSL Line.  **NOTE** - To utilize this feature, it requires an account provided by an Internet Service Provider. Enter the user name and password provided by the ISP. Click **Apply** to apply settings or **Cancel** to cancel changes.
- 4. 3G(*)**(3G Series Only) – Use this option if using a 3G SIM card to transmit video/audio surveillance over a 3G network

IP Settings


Mode	3G
APN	internet
Dial Number	*99#
PIN Code	0000
Username	<input type="text"/>
Password	<input type="text"/>

Apply Cancel



NOTE - This function is only available for GOB models.

- Enter the APN (Access Point Number), Dial Number, PIN Code, User Name and Password provided by the ISP.
- Click **Apply** to apply the settings. The message below will be displayed if the 3G settings were successfully applied.

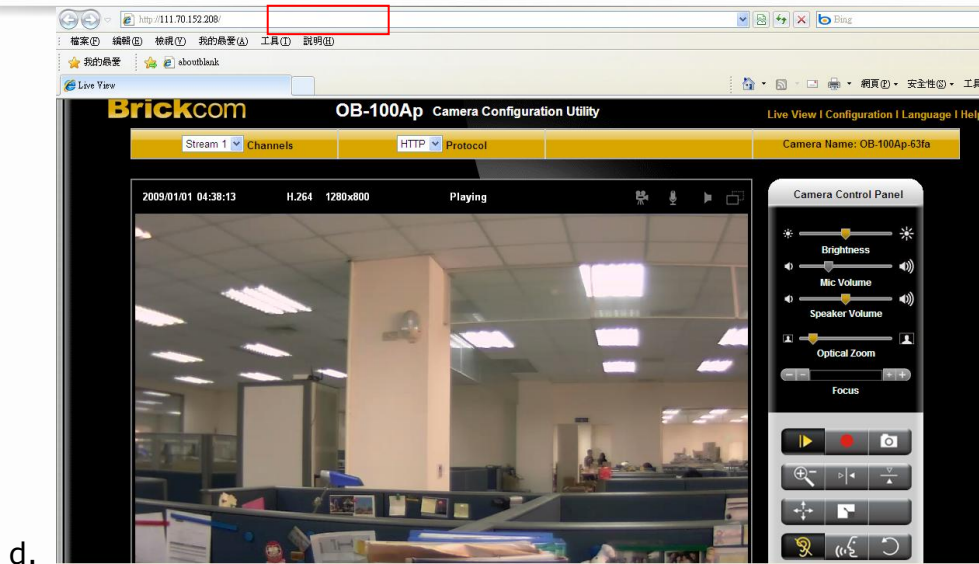


UPnP

Universal Plug and Play (UPnP) simplifies the process of adding a camera to a local area network. Once connected to a LAN, the camera will automatically appear on the intranet. Click “Enable” to enable this function and enter an UPnP name which the camera will appear under on the intranet.

UPnP	
Enabled	<input checked="" type="checkbox"/>
UPnP Name	<input type="text" value="WCB-100Ap-2c11"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Click **Apply** to apply settings or **Cancel** to cancel changes.

DDNS (dynamic domain name service)

DDNS links a domain name to an IP address, allowing users to easily access their camera even with a changing IP address. Brickcom network cameras are compatible with three DDNS service providers (1) DynDNS, (2) TZO, and (3) No-IP.  **NOTE** - Before utilizing this function; please apply for a dynamic domain account from a DDNS provider.

DynDNS	TZO	NO-IP
<input type="checkbox"/>		
Enable	<input type="checkbox"/>	
Username	<input type="text"/>	
Password	<input type="text"/>	
Hostname	<input type="text"/>	
<input type="button" value="Apply"/>		<input type="button" value="Cancel"/>

DynDNS – Enable the DynDNS to allow the camera to have a fixed host and domain name. Refer to the DynDNS website (www.dyndns.com) to apply for a dynamic domain account. When an account has been created, enter the username, password and hostname. Click **Apply** to apply settings or **Cancel** to cancel changes.

TZO

DynDNS	TZO	NO-IP
<input type="checkbox"/>		
Enable	<input type="checkbox"/>	
Email Address	<input type="text"/>	
TZO Password	<input type="text"/>	
Domain Name	<input type="text"/>	
<input type="button" value="Apply"/>		<input type="button" value="Cancel"/>

TZO is a DDNS provider which allows users to create a dynamic DNS. Refer to the TZO website (<http://www.tzo.com/>) to apply for a dynamic domain account. When an account has been created, enter the e-mail address, password and domain name. Click **Apply** to apply settings or **Cancel** to cancel changes.

No-IP

DynDNS	TZO	NO-IP	
Enable	<input type="checkbox"/>		
Email Address	<input type="text"/>		
Password	<input type="text"/>		
Hostname	<input type="text"/>		


No-IP is a DDNS provider which offers DNS services, email, network monitoring and SSL certificates. Email services include POP3 email, outbound SMTP email, backup mail services and mail reflection and filtering. Refer to the No-IP website (www.no-ip.com) to apply for a dynamic domain account. When an account has been created, enter the e-mail address, password and domain name.


Click **Apply** to apply settings or **Cancel** to cancel changes.



EasyLink™

EasyLink™ is a unique Brickcom function which allows users to assign a unique EasyLink name to their network camera's IP address. There is no need to configure the router to open up ports or remember hard-to-memorize IP addresses. When this function is enabled, users can log onto [uniqueEasyLinkname].mybrickcom.com to view the camera's web GUI and live view.

1. Check the box to enable EasyLink™.
2. If Auto mode is selected, the following page will be displayed.  **NOTE** - This mode is recommended.
3. Enter a unique EasyLink name whose length must be between 5-32 characters. Verify that the EasyLink name is available.

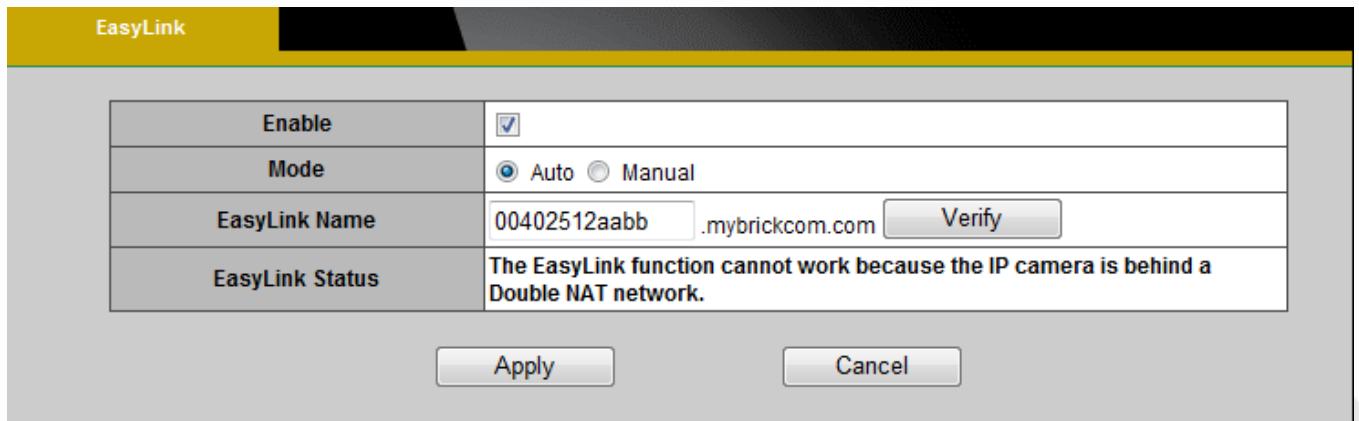

EasyLink	
Enable	<input checked="" type="checkbox"/>
Mode	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
EasyLink Name	00402512aabb .mybrickcom.com <input type="button" value="Verify"/>
EasyLink Status	The EasyLink function cannot work because the IP camera is behind a Double NAT network.

4. If Manual mode is selected, the following page will be displayed.
 - a. Manually enter the Public IP Address, HTTP port and RTSP port or leave the default values.

EasyLink

Enable	<input checked="" type="checkbox"/>
Mode	<input type="radio"/> Auto <input checked="" type="radio"/> Manual
EasyLink Name	00402512aabb .mybrickcom.com <input type="button" value="Verify"/>
Public IP Address	0 . 0 . 0 . 0
Public HTTP port	80
Public RTSP port	554
EasyLink Status	The EasyLink function cannot work because the IP camera is behind a Double NAT network.

Click **Apply** to apply settings or **Cancel** to cancel changes.



NOTE - The EasyLink function will not work if the following conditions occur:

1. The camera cannot be located behind a double NAT network.
2. The camera's IP address cannot be assigned to specific port numbers using the router's port forwarding.
3. EasyLink uses UPnP to exchange port information with the router. The camera must connect to the internet through a router which supports UPnP.

Wireless(*)

These settings control how a Network Camera interacts with a wireless network. Users can identify the wireless network and enable wireless encryption.



NOTE – This function is only available for WCB models.

Basic Settings

The screenshot shows the 'Basic Settings' tab selected. The 'Network Name (SSID)' field is set to 'Brickcom' with a 'Site survey' button to its right. The 'Security' dropdown menu is open, showing 'Disabled' as the selected option, with other options being 'WEP', 'WPA-Personal', and 'WPA2-Personal'. There are 'Apply' and 'Cancel' buttons. Below the settings is a 'Site Survey List' section with a message: 'Click the Site Survey Button to update the list.'

Network Name (SSID) - The Service Set Identifier (SSID) is the network name used to identify the wireless signal emitted from a wireless camera. It is case-sensitive and can be up to 32 characters long.

Wireless devices have a default SSID set by the factory. Brickcom wireless products use **Brickcom** as the default name. It is recommended for users to rename their SSID to something unique in order to distinguish their wireless device from surrounding wireless networks.



NOTE - Be careful when including personal information when naming the SSID as it is viewable by anyone browsing for wireless networks.

Security - Encryption protects data transmitted over a wireless network. Wi-Fi Protected Access (WPA-Personal/WPA2-personal) and Wired Equivalent Privacy (WEP) offer different levels of security for wireless communication. A network encrypted with WPA-Personal/WPA2-personal is more secure than a network encrypted with WEP because WPA-Personal/WPA2-personal uses dynamic key encryption. To protect the information as it passes through the airwaves, it is recommended to enable the highest level of encryption supported by the network equipment.

Site Survey – Survey the local area for available wireless networks. The user should select their Local Area Network (LAN) from the Site Survey List.

The screenshot shows the 'Wi-Fi Protected Setup' configuration page. At the top, there are three tabs: 'Basic Settings', 'Advanced Settings', and 'Wi-Fi Protected Setup'. The 'Network Name (SSID)' field contains 'Brickcom' and the 'Security' dropdown is set to 'Disabled'. There are 'Apply' and 'Cancel' buttons below the form. Below the form is a 'Site Survey List' table with the following data:

SSID	Mode	Security	Channel	Signal	Type	Select
test_gary_Brickcom_1	11b/g/n	NONE	1	78%	Infrastructure	Select
SmartHub-AWRT600N	11b/g/n	NONE	1	73%	Infrastructure	Select
Test-FAE	11b/g/n	NONE	1	100%	Infrastructure	Select
bricom_3	11b/g/n	NONE	1	89%	Infrastructure	Select
Test_Cavin	11b/g	NONE	1	57%	Infrastructure	Select
PC NVP TEST	11b/g/n	NONE	2	68%	Infrastructure	Select

WEP- Wired Equivalent Privacy (WEP) is a basic encryption method which transmits network broadcast messages using radio signals. It is not as secure as WPA.

The screenshot shows the 'Basic Settings' tab of a router configuration page. The 'Security' dropdown is set to 'WEP', and 'TX Key' is set to '1'. 'WEP Encryption' is set to '40/64 bits (10 hex digits)'. There are four empty text boxes for 'Key 1' through 'Key 4'. 'Authentication' is set to 'Open System'. Below the settings are 'Apply' and 'Cancel' buttons. A 'Site Survey List' table is also visible.

SSID	Mode	Security	Channel	Signal	Type	Select
test_gary_Brickcom_1	11b/g/n	NONE	1	78%	Infrastructure	Select
SmartHub-AWRT600N	11b/g/n	NONE	1	73%	Infrastructure	Select
Test-FAE	11b/g/n	NONE	1	100%	Infrastructure	Select
bricom_3	11b/g/n	NONE	1	89%	Infrastructure	Select
Test_Cavin	11b/g	NONE	1	57%	Infrastructure	Select
PC-MB-TEST	11b/g/n	NONE	2	68%	Infrastructure	Select

Tx Key - Select a key from the drop-down menu.

WEP Encryption - Select a level of WEP encryption: 64 bits 10 hex digits or 128 bits 26 hex digits. The default is 64 bits 10 hex digits.

Key 1-4 - Enter the WEP key(s) manually.

Authentication - The default is set to Open System, which allows either Shared Key or Auto authentication to be used. With Shared Key authentication, the sender and recipient use a WEP key for authentication. With Auto authentication, the sender and the recipient do not use a WEP key for authentication.

Click **Apply** to apply settings or **Cancel** to cancel changes.

WPA-Personal - WiFi Protected Access (WPA)-Personal

Basic Settings
Advanced Settings
Wi-Fi Protected Setup

Network Name (SSID)	<input type="text" value="Brickcom"/>	<input type="button" value="Site survey"/>	
Security	<input type="text" value="WPA-Personal"/>		
Encryption	<input type="text" value="TKIP"/>		
Shared Key	<input type="text" value=""/> (8 to 63 characters)		

Site Survey List						
SSID	Mode	Security	Channel	Signal	Type	Select
test_gary_Brickcom_1	11b/g/n	NONE	1	78%	Infrastructure	<input type="button" value="Select"/>
SmartHub-AWRT600N	11b/g/n	NONE	1	73%	Infrastructure	<input type="button" value="Select"/>
Test-FAE	11b/g/n	NONE	1	100%	Infrastructure	<input type="button" value="Select"/>
bricom_3	11b/g/n	NONE	1	89%	Infrastructure	<input type="button" value="Select"/>
Test_Cavin	11b/g	NONE	1	57%	Infrastructure	<input type="button" value="Select"/>
PC-NVR-TEST	11b/g/n	NONE	2	68%	Infrastructure	<input type="button" value="Select"/>

Encryption - Supports two encryption methods with dynamic encryption keys: Temporal Key Integrity Protocol (TKIP) and Advanced Encryption Standard (AES). Select the algorithm type from the drop down menu: TKIP or AES. The default is TKIP.

Shared Key - Enter the key shared between the Router and the server keys. Enter a password of 8-63 characters.

Click **Apply** to apply settings or **Cancel** to cancel changes.



WPA2-Persona I - WiFi Protected Access (WPA2-Personal)

Basic Settings | Advanced Settings | **Wi-Fi Protected Setup**

Network Name (SSID)	<input type="text" value="Brickcom"/> <input type="button" value="Site survey"/>
Security	<input type="text" value="WPA2-Personal"/>
Encryption	<input type="text" value="AES"/>
Shared Key	<input type="text"/> (8 to 63 characters)

Site Survey List						
SSID	Mode	Security	Channel	Signal	Type	Select
test_gary_Brickcom_1	11b/g/n	NONE	1	78%	Infrastructure	<input type="button" value="Select"/>
SmartHub-AWRT600N	11b/g/n	NONE	1	73%	Infrastructure	<input type="button" value="Select"/>
Test-FAE	11b/g/n	NONE	1	100%	Infrastructure	<input type="button" value="Select"/>
bricom_3	11b/g/n	NONE	1	89%	Infrastructure	<input type="button" value="Select"/>
Test_Cavin	11b/g	NONE	1	57%	Infrastructure	<input type="button" value="Select"/>
PC-NVP-TEST	11b/g/n	NONE	2	68%	Infrastructure	<input type="button" value="Select"/>

Encryption - WPA2 supports AES encryption method with dynamic encryption keys.

Shared Key - Enter the key shared between the Router and the server keys. Enter a password of 8-63 characters.



NOTE - If using WPA or WPA2, each device in the wireless network must use the same WPA or WPA2 method and shared key or else the network will not function properly.

Advanced Settings

Basic Settings	Advanced Settings	Wi-Fi Protected Setup
Network Mode	BGN-Mixed	
Radio Band	Auto-20/40MHz Channel	
WMM (802.1e QoS)	Disabled	

Network Mode - From the drop-down menu, select the wireless standards running on the network.

- If there are Wireless-B, Wireless-G and Wireless-N (2.4GHz) devices on the network, use the default setting, **BGN-Mixed**.
- If there are Wireless-B and Wireless-G devices on the network, select **BG-Mixed**.
- If there are only Wireless-B devices on the network, select **Wireless-B Only**.
- If there are only Wireless-G devices on the network, select **Wireless-G Only**.
- If there are only Wireless-N (2.4GHz) devices on the network, select **Wireless-N Only**.
- (*) If there are Wireless-A and Wireless-N devices on the network, select **AN-Mixed**.
- (*) If there are Wireless-A, Wireless-B, Wireless-G and Wireless-N (2.4GHz) devices on the network, use the default setting, **ABGN-Mixed**.
- (*) If there are only Wireless-A devices on the network, select **Wireless-A Only**.

Radio Band - The settings are available for the Auto-20/40MHz channel and Standard-20 MHz channel.

Enable WMM (802.1e QoS) - WMM is a wireless Quality of Service feature that improves quality for audio, video, and voice applications by prioritizing wireless traffic. To use this feature, the wireless client devices on the network must support Wireless WMM. The default setting is **Enabled**. To disable this feature, select **Disable**.

Click **Apply** to apply settings or **Cancel** to cancel changes

Wi-Fi Protected Setup

Basic Settings	Advanced Settings	Wi-Fi Protected Setup
Wi-Fi Protected Setup		
PIN Mode	Enter PIN number 38989827 in the AP device Enter the AP's SSID <input type="text" value="Brickcom"/> Click the Register button on the right to start WPS. <input type="button" value="Register"/>	
Wi-Fi Protected Setup Status	Not Configured	
Hardware WPS Button		
Enabled	<input checked="" type="checkbox"/>	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>		

Use this method if the client device has a Wi-Fi Protected Setup PIN number.

1. Enter the network name from the device in the field.
2. Click <Register> to start WPS.
3. Click "Enable" to enable the WPS Button. If this feature is not enabled, the user will not be able to use the WPS button

Click **Apply** to apply settings or **Cancel** to cancel changes.



HTTP/HTTPS

HTTP	
Enabled	<input checked="" type="checkbox"/>
Port	80

HTTPS	
Enabled	<input type="checkbox"/>
Port	443


HTTP – (HyperText Transfer Protocol) - This protocol allows for TCP protocol quality without having to open specific ports for streaming. Users inside a firewall can utilize this protocol to allow streaming data through.

HTTPS - (Hypertext Transfer Protocol over SSL) - This protocol allows authentication and encrypted communication over SSL (Secure Socket Layer). It helps protect streaming data transmission over the Internet on a higher security level than HTTP.


Click “Enable” to enable and **Apply** to apply settings or **Cancel** to cancel changes.

To enable HTTPS, users have to create and install a certificate.

1. Click “Continue to this website” to install.

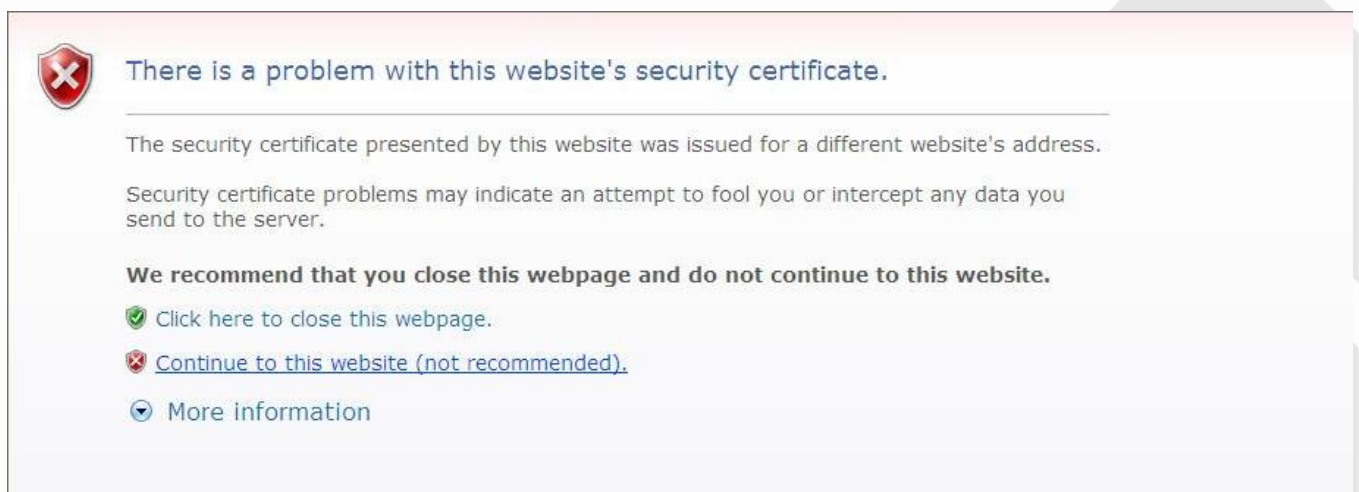


2. Enter the User name and Password of the camera.

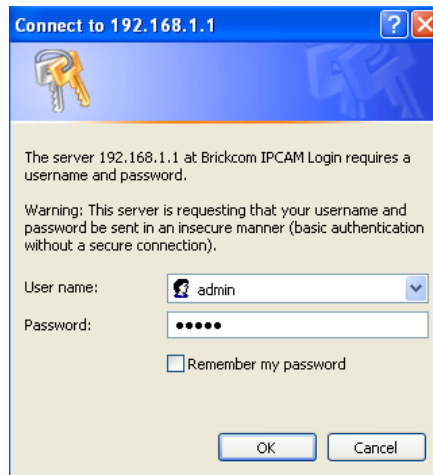

3. Click "Certificate Error" on the top right corner of the window to view the certificate.



4. Click "Install Certificate" and follow the steps to finish the installation.

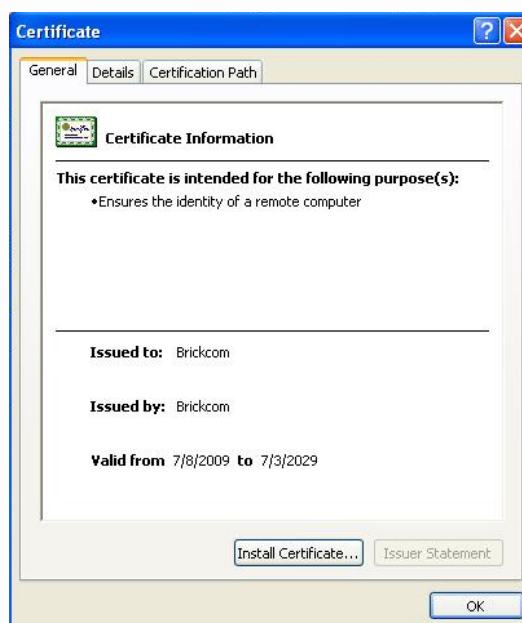


Event


Event Settings

When an event (such as unauthorized movement) occurs, the camera can be scheduled to perform certain actions. An Event Type is a set of parameters that defines these actions.

This section describes how to configure the camera to perform certain actions when events occur.

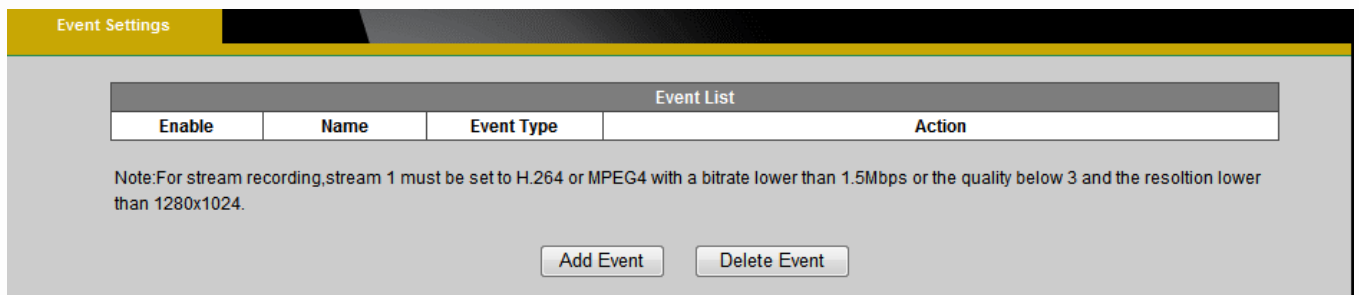

Click <Add Event> on the Event Settings page. The Event Setup page will appear.

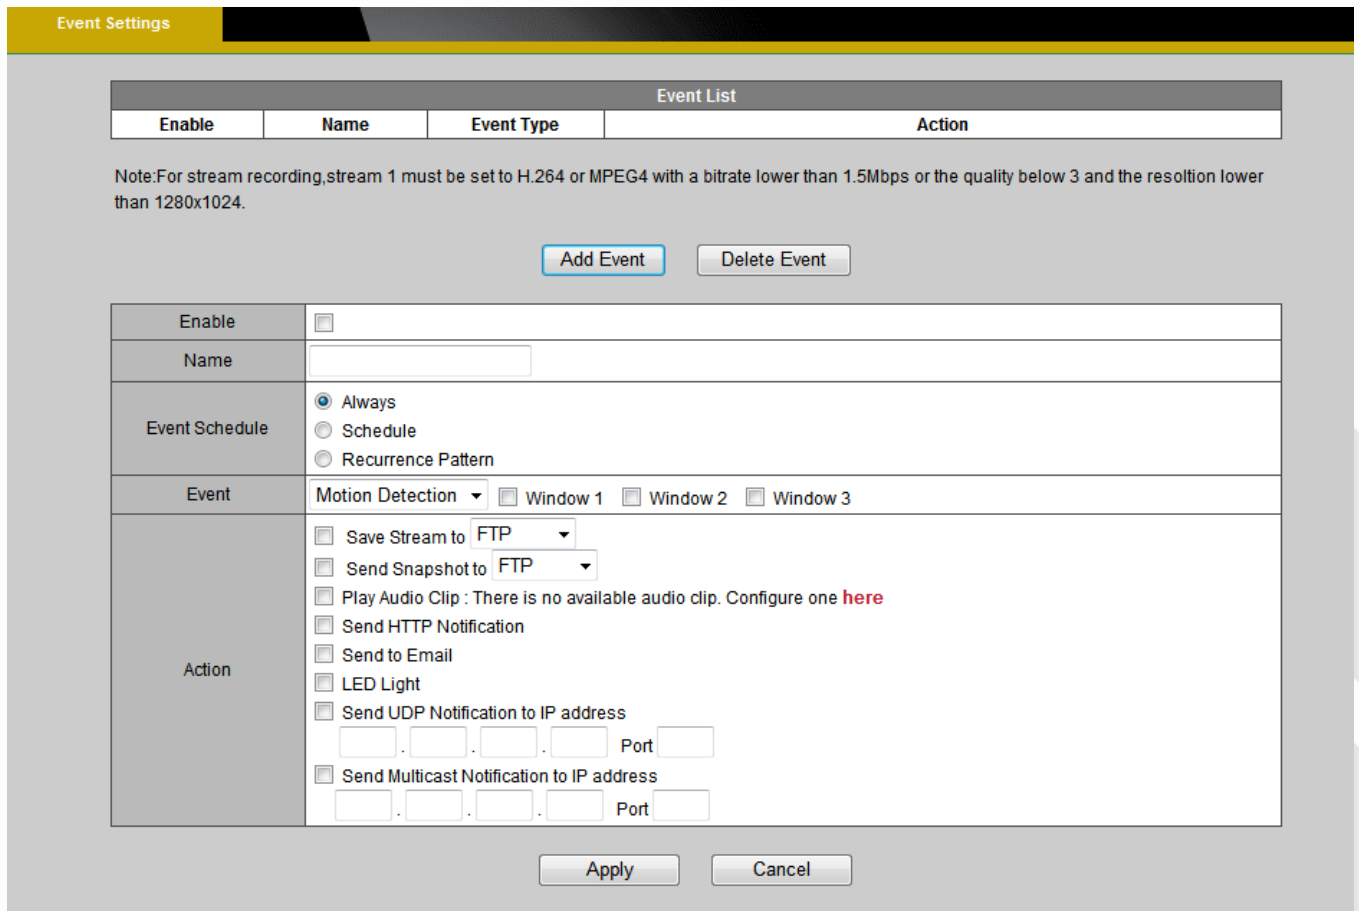

How to Set Up an Event Schedule

Event Schedule describes how and when the camera performs certain actions.

1. Check “Enable” and enter a descriptive name for the event schedule.
2. Set Event Schedule to define when the event is activated by selecting from Always (24 hours), Schedule or Recurrence pattern.
 - a. If Schedule is selected from the Event Schedule, the following page will be displayed:

Enable	<input type="checkbox"/>																																																
Name	<input type="text"/>																																																
Event Schedule	<input type="radio"/> Always <input checked="" type="radio"/> Schedule <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th></th> <th>0:00</th> <th>6:00</th> <th>12:00</th> <th>18:00</th> <th>24:00</th> </tr> </thead> <tbody> <tr><td>Sun</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Mon</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Tue</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Wed</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Thu</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Fri</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Sat</td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table> <p> <input checked="" type="checkbox"/> Event Schedule <input type="checkbox"/> Not Scheduled </p> <p style="text-align: right;"> <input type="button" value="Select All"/> <input type="button" value="Clear All"/> <input type="button" value="Undo All"/> </p> </div> <input type="radio"/> Recurrence Pattern		0:00	6:00	12:00	18:00	24:00	Sun						Mon						Tue						Wed						Thu						Fri						Sat					
	0:00	6:00	12:00	18:00	24:00																																												
Sun																																																	
Mon																																																	
Tue																																																	
Wed																																																	
Thu																																																	
Fri																																																	
Sat																																																	
Event	Motion Detection <input type="checkbox"/> Window 1 <input type="checkbox"/> Window 2 <input type="checkbox"/> Window 3																																																
Action	<input type="checkbox"/> Save Stream to SD card <input type="checkbox"/> Send Snapshot to FTP <input type="checkbox"/> Play Audio Clip : There is no available audio clip. Configure one here <input type="checkbox"/> Send HTTP Notification <input type="checkbox"/> Send to Email <input type="checkbox"/> LED Light <input type="checkbox"/> Send UDP Notification to IP address . . . Port <input type="checkbox"/> Send Multicast Notification to IP address . . . Port																																																
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>																																																	

A Scheduled Event can be programmed for certain times and day. Click individual boxes to

schedule specific times for the camera to detect events.

b. If Recurrence Pattern is selected, the following page will be displayed.

Event Settings

Event List			
Enabled	Name	Event Type	Action
<input checked="" type="checkbox"/>	12345	Motion Detection	Send to Email
<input checked="" type="checkbox"/>	abcde	PIR	Take Snapshot
<input checked="" type="checkbox"/>	asdf	Audio	LED Light

Add Event
Delete Event

Enabled	<input checked="" type="checkbox"/>
Name	<input type="text" value="asdf"/>
Event Schedule	<input type="radio"/> Always <input type="radio"/> Schedule <input checked="" type="radio"/> Recurrence Pattern <div style="margin-left: 20px;"> <input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> </div> <div style="margin-left: 20px;"> Start <input type="text" value="00"/> : <input type="text" value="07"/> Duration <input type="text" value="10"/> Minutes </div>
Event	<input type="text" value="Audio Detection"/>
Action	<input type="checkbox"/> Save Stream to <input type="text" value="SD card"/> <input type="checkbox"/> Send Snapshot to <input type="text" value="FTP"/> <input type="checkbox"/> Play Audio Clip : There is no available audio clip. Configure one here <input type="checkbox"/> Send HTTP Notification <input type="checkbox"/> Send to Email <input checked="" type="checkbox"/> LED Light <input type="checkbox"/> Send UDP Notification to IP address <input type="text" value=""/> . <input type="text" value=""/> . <input type="text" value=""/> . <input type="text" value=""/> Port <input type="text" value=""/> <input type="checkbox"/> Send Multicast Notification to IP address <input type="text" value=""/> . <input type="text" value=""/> . <input type="text" value=""/> . <input type="text" value=""/> Port <input type="text" value=""/>

Apply
Cancel

- i. An event schedule can be programmed to recur at different times according to the user's needs. Select the days for the event schedule to occur. Select a start time and specify the duration.
3. Define what will trigger an event to occur by selecting an option from the Event drop-down list.
4. Select the Actions that will occur when the event is triggered.

a. When <Send to Email> is selected, the following page will be shown:

Enable	<input type="checkbox"/>
Name	<input type="text"/>
Event Schedule	<input checked="" type="radio"/> Always <input type="radio"/> Schedule <input type="radio"/> Recurrence Pattern
Event	Motion Detection <input type="checkbox"/> Window 1 <input type="checkbox"/> Window 2 <input type="checkbox"/> Window 3
Action	<input type="checkbox"/> Save Stream to FTP <input type="checkbox"/> Send Snapshot to FTP <input type="checkbox"/> Play Audio Clip : There is no available audio clip. Configure one here <input type="checkbox"/> Send HTTP Notification <input checked="" type="checkbox"/> Send to Email <input type="checkbox"/> LED Light <input type="checkbox"/> Send UDP Notification to IP address <input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/> Port <input type="text"/> <input type="checkbox"/> Send Multicast Notification to IP address <input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/> Port <input type="text"/>
Email	Sender <input type="text"/> TO <input type="text"/> CC <input type="text"/> Sender's Name <input type="text"/> Subject <input type="text"/>

- i. Sender - Enter the email address of the sender.
- ii. Recipient - Enter the email address of the recipient. To enter multiple recipients, separate each using a comma.
- iii. Sender's Name – Enter the sender's name that will appear in the recipient's inbox.
- iv. Subject - Enter the title of the email.

5. When complete, click **Apply** to save new event or **Cancel** to delete the event. The new event will appear on the event list.

6. To edit an event setting; select the event from the list. To remove an event setting from the list, select an event name from the list and then click <Delete Event>. Click <Add Event> to add more events.



NOTE - Refer to the Audio Clip section for more details about the "Play Audio Clip" action.

Motion Detection

Motion can be detected by measuring changes in the speed or vector of an object or objects in the monitored area. This section explains how to configure the Network Camera to enable motion detection.

Detection Settings

Region Settings

- Enable Window 1
- Enable Window 2
- Enable Window 3

Sensitivity

Threshold

Use the mouse to resize or move the Motion Detection Window. This chart records the amount of activity within the Motion Detection Window. When the activity level is above the threshold, the user will be notified..

※The MD setting is only activate in stream 1 .

Apply Cancel


Detection Setting – Use this setting to enable and define the motion detection windows. The user can defined up to three areas on the live view window for motion detection.

1. Select <Window1>, <Window2>, or <Window3> to adjust the motion detection window.
2. Check the box to enable the window.
3. Use the mouse to resize or move the motion detection window.
4. Adjust the “Sensitivity” level. Lower sensitivity levels will result in more activity needed to trigger an event.
5. Adjust the “Threshold” to change the threshold level. The higher the threshold, the larger objects need to be to trigger an event.

- The chart below the Live View window indicates the activity level of the Motion Detection window. When motion is detected by the camera and exceeds the defined threshold, a red bar will appear. Users can use this feature as a trigger source to send photos or videos to a remote server via email or FTP.

Click **Apply** to apply settings or **Cancel** to cancel changes.

PIR(*)

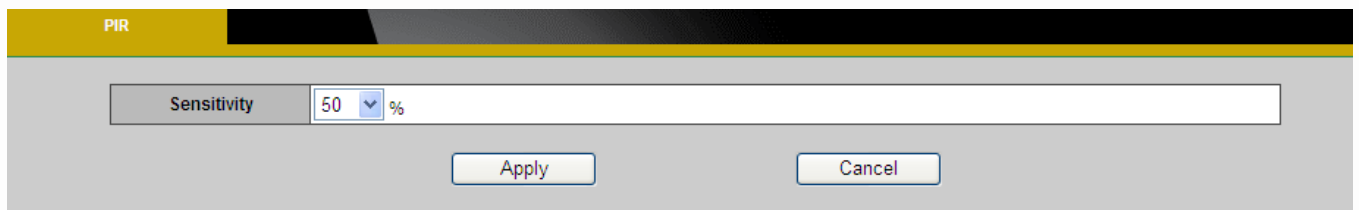
A screenshot of a web interface for PIR sensor settings. At the top, there is a yellow header with the text "PIR". Below the header, there is a grey panel containing a "Sensitivity" label, a dropdown menu showing "50", and a percentage sign "%". Below the dropdown menu, there are two buttons: "Apply" and "Cancel".

The PIR (Passive InfraRed) sensor measures infrared light radiating from objects in its field of view. This can be used to detect a moving object, such as a person, in dimly lit areas.

Sensitivity – Adjust the sensitivity of the PIR Sensor from the drop down menu. The sensitivity can be set from 10 - 100%; with the default sensitivity set at 50%. Higher sensitivity levels will increase the range of the PIR Sensor. When the sensitivity level is set to 100%, the PIR sensor will be able to detect moving objects within six meters.



Audio Detection

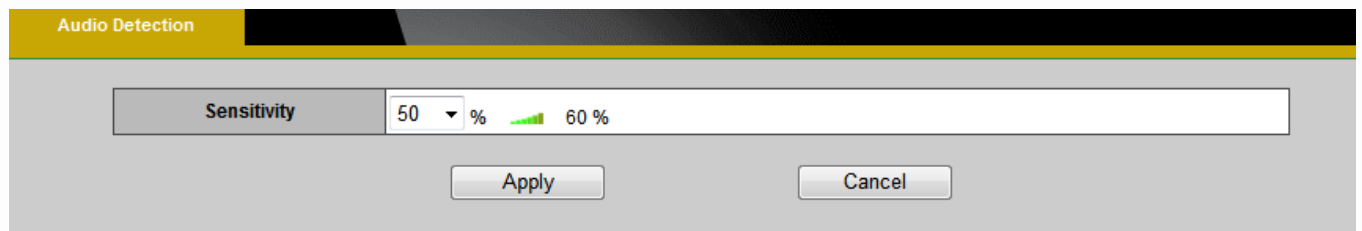

Users can schedule an event to be triggered if there is a change in the sound level of a monitored area. Audio detection can be used to measure change in the ambient voice. Select the sensitivity from the drop-down menu.

Sensitivity - is used to adjust the sensitivity of the sound level from 10 - 100%. The default sensitivity is 50%.

 60 % Display the current sound level.

Click **Apply** to apply settings or **Cancel** to cancel changes.



Notifications

Use the tools in this section to specify what type of notification will be sent when an event occurs. The camera can send buffered images to an FTP server, Samba, Email, or HTTP.

FTP Settings

File Transfer Protocol (FTP) is used as an application component to automatically transfer files for program internal functions. Select “Primary FTP Server” from the Server Selection drop down menu to send media files to a FTP server when an event is triggered. Enter the FTP IP address or hostname. By default, the FTP port server is set to 21. Enter the account name, password and FTP Path to configure the settings.

FTP Settings	
Server Selection	Primary FTP Server
FTP Address	IP Address 0 . 0 . 0 . 0
FTP Port	21
Account Name	
Account Password	
FTP Path	

Apply Test Cancel

Click **Apply** to apply settings or **Cancel** to cancel changes.

E-mail Settings

Select “Primary Email Server” option from the Server Selection drop down menu to send media files to an email server when an event is triggered.


SMTP Server - Enter the server host name of the email server.

SMTP Port - Enter the port number of the email server; by default, the SMTP port is set to 25.

Authentication - Select the authentication type from the drop-down menu.

Email Account - Enter the user name of the email account if necessary.

Email Password - Enter the password of the email account if necessary.

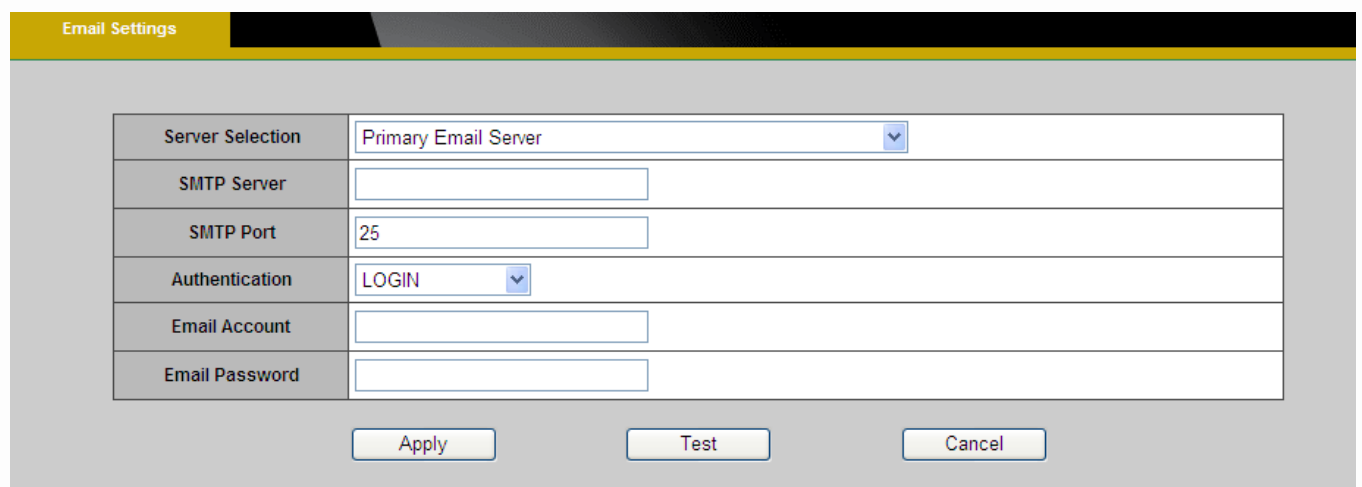

The screenshot shows a web interface for configuring email settings. At the top left, there is a yellow header with the text "Email Settings". Below this is a form with several fields:

Server Selection	Primary Email Server
SMTP Server	
SMTP Port	25
Authentication	LOGIN
Email Account	
Email Password	

At the bottom of the form, there are three buttons: "Apply", "Test", and "Cancel".

Click **Apply** to apply settings or **Cancel** to cancel changes.



Samba Settings

Select this option to send the media files via a network neighborhood when an event is triggered.

Server Address - Enter the IP address of the Samba server.

User Name - Enter the user name of the Samba server.

Password - Enter the password of the Samba server.

Work Group - Enter the workgroup of the Samba server.

Shared Folder - Enter the share folder of the Samba server.

Samba Settings	
Server Address	IP Address [v] 0 .0 0 .0
Username	<input type="text"/>
Password	<input type="text"/>
WorkGroup	<input type="text"/>
Shared Folder	<input type="text"/>

Apply Test Cancel

Click **Apply** to apply settings or **Cancel** to cancel changes.



HTTP Settings

Select this option to send the media files via an HTTP notification when an event is triggered.

HTTP Settings	
URL	<input type="text"/>
Message	<input type="text"/>
Username	<input type="text"/>
Password	<input type="text"/>

URL –Specify the URL to send HTTP requests. The URL is normally written as:

[http://ip_address/ notification.cgi?parameter](http://ip_address/notification.cgi?parameter)

ip_address – type the IP address or host name of the HTTP host.

Parameter – type the notification parameter if necessary.

Example

URL - <http://192.168.1.1/xxxx.cgi>

Message - name1=value1&name2=vlaue2

Result - [http://192.168.1.1/xxxx.cgi? name1=value1&name2=vlaue2](http://192.168.1.1/xxxx.cgi?name1=value1&name2=vlaue2)

Ex:


<https://192.168.1.1/notification.cgi?event=MD&camera=FB-100A>

Message - Enter the message notification that will be sent when an event is triggered.

Enter the user name and password if necessary.

Click **Apply** to apply settings or **Cancel** to cancel changes.

Digital Output (DO) (*)

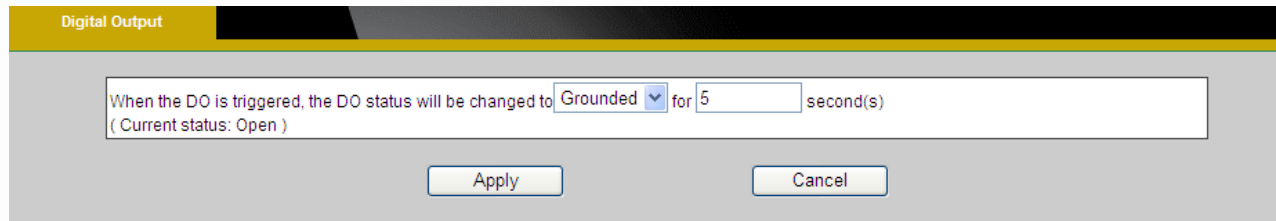

When the DO is triggered, the DO status will be changed to for second(s)
(Current status: Open)

The DO socket allows the IP camera to send output to an external device. While executing the DO notification action, the IP camera drives voltage on the connected DO wire to the triggering voltage level for X number of seconds. The connected external device will then be triggered for X number of seconds.

Triggered Voltage Level - OPEN or GROUND

Users should select the option according to the specification of their external device.



Video Clip

Video Clip	
Pre-Alarm Buffer	<input type="text" value="5"/> Seconds (0-10)
Post-Alarm Buffer	<input type="text" value="5"/> Seconds (0-30)
Maximum Buffer Size	<input type="text" value="1024"/> Kbytes (128-1500)

This function is used to determine when video clips will be recorded and stored after an event is triggered.

Pre-alarm buffer - Images can be stored internally on the server from the time immediately preceding the trigger. Enter the desired length of time.

Post-alarm buffer - Images can be stored internally on the server from the time immediately following the trigger. Enter the desired length of time.

Maximum buffer size –Specify the maximum file size allowed.


Click **Apply** to apply settings or **Cancel** to cancel changes.



Audio Clip(*)

Audio Recording – Audio clips can be recording and played when an event occurs.

The screenshot shows the 'Audio Recording' interface. At the top, there is a yellow header with the text 'Audio Recording'. Below this is a table titled 'Audio Clip List' with two columns: 'Index' and 'File Name'. The first row contains the value '1' in the 'Index' column and '11111.wav' in the 'File Name' column. Below the table are four buttons: 'Play', 'Stop', 'Delete', and 'Export'. Underneath these buttons is an 'Import' section with the text 'Please select a file to import' followed by a text input field, a 'Browse...' button, and an 'Import' button. At the bottom is the 'Audio Recording Settings' section, which includes a 'File Name' text input field, a 'Duration' dropdown menu set to '5' with 'Second' next to it, and a 'Record' button.

Click **Browse** to import a file from a local hard drive or network disk. Select the file and click **Import**.  **NOTE** – The camera can only play audio clips which are saved as .wav files with G.711 u-law encoding in 8000 Hz sampling rate.

To record a new clip using the camera's microphone:

1. File Name-Enter a file name.
2. Duration - Enter the number of seconds to record.
3. Click **Record** to record the new audio clip.
4. The new audio clip will appear on the audio clip list.
5. Select an audio clip file from the Audio Clip List.
 - a. Play- Select to hear the audio clip
 - b. Stop- Select to stop playing the audio clip.
 - c. Delete- Select to delete an audio clip.
 - d. Export- Select to export the audio clip to a local hard drive or network disk.

LED Light(*)

LED Light	
Mode	<input checked="" type="radio"/> Keep active during event <input type="radio"/> Keep active for 1 Sec (1~10)
LED Control	Activate: On Inactivate: Off

Apply Cancel

Mode – Select “Keep active during event” or “Keep active for” a specific amount of time when an event is triggered.

LED Control - The LED on the front of the camera can be set to flash at a configurable interval when an event is triggered. From the Activate drop down menu, select a percentage which the LED will brighten to. When the LED reaches the selected percentage, it can be configured to fade to off or turn off. Select the option from the Inactive menu.


Click **Apply** to apply settings or **Cancel** to cancel changes.



System

System Log

Log – Set up the camera to record a system log when an event is triggered.

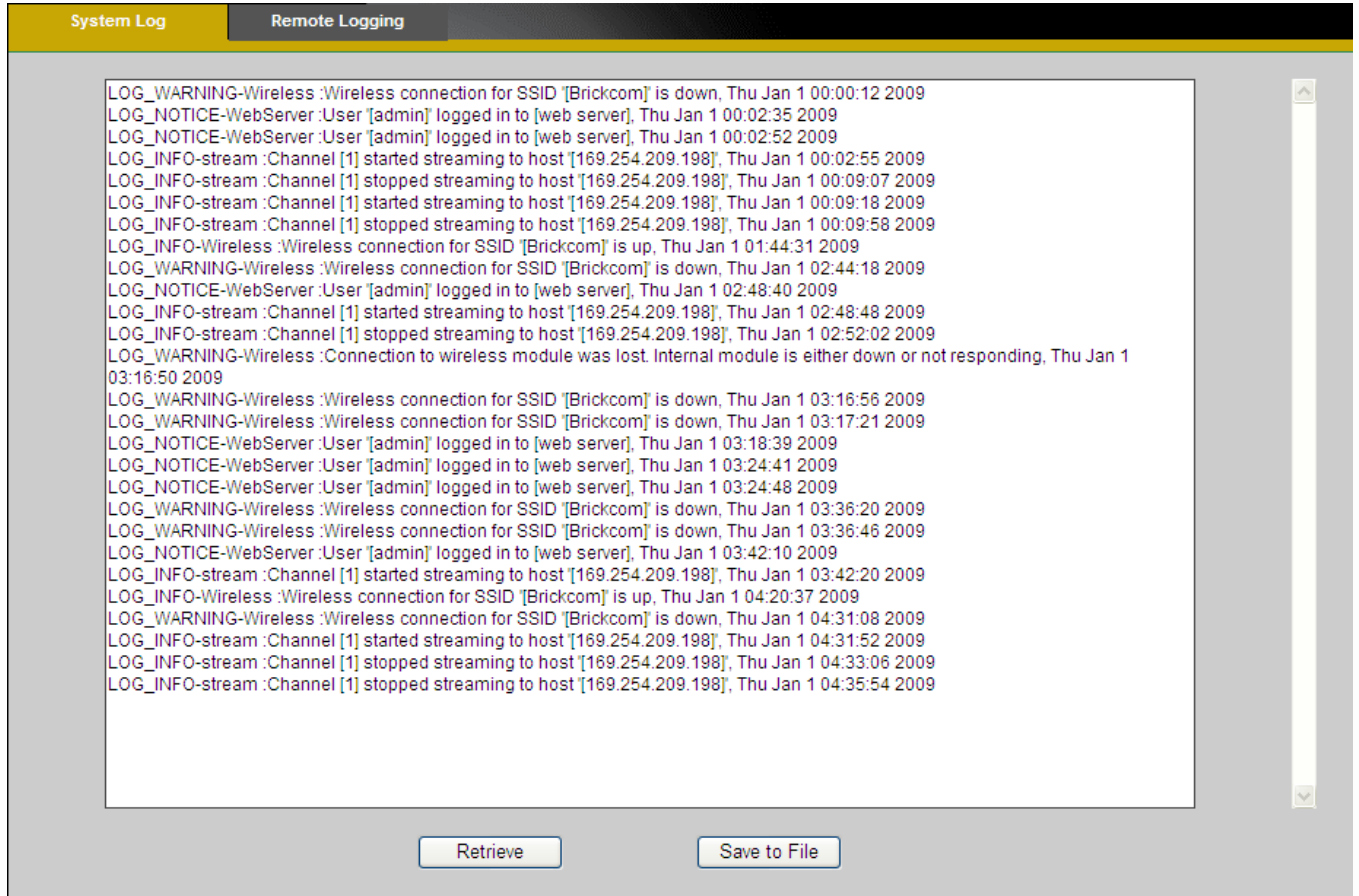

The screenshot shows a web interface for viewing system logs. At the top, there are two tabs: "System Log" (selected) and "Remote Logging". Below the tabs is a large text area containing a list of log entries in chronological order. The entries include various messages such as "LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down", "LOG_NOTICE-WebServer :User '[admin]' logged in to [web server]", and "LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]'". At the bottom of the interface, there are two buttons: "Retrieve" and "Save to File".

```
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 00:00:12 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 00:02:35 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 00:02:52 2009
LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]', Thu Jan 1 00:02:55 2009
LOG_INFO-stream :Channel [1] stopped streaming to host '[169.254.209.198]', Thu Jan 1 00:09:07 2009
LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]', Thu Jan 1 00:09:18 2009
LOG_INFO-stream :Channel [1] stopped streaming to host '[169.254.209.198]', Thu Jan 1 00:09:58 2009
LOG_INFO-Wireless :Wireless connection for SSID '[Brickcom]' is up, Thu Jan 1 01:44:31 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 02:44:18 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 02:48:40 2009
LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]', Thu Jan 1 02:48:48 2009
LOG_INFO-stream :Channel [1] stopped streaming to host '[169.254.209.198]', Thu Jan 1 02:52:02 2009
LOG_WARNING-Wireless :Connection to wireless module was lost. Internal module is either down or not responding, Thu Jan 1
03:16:50 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 03:16:56 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 03:17:21 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 03:18:39 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 03:24:41 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 03:24:48 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 03:36:20 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 03:36:46 2009
LOG_NOTICE-WebServer :User '[admin]' logged in to [web server], Thu Jan 1 03:42:10 2009
LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]', Thu Jan 1 03:42:20 2009
LOG_INFO-Wireless :Wireless connection for SSID '[Brickcom]' is up, Thu Jan 1 04:20:37 2009
LOG_WARNING-Wireless :Wireless connection for SSID '[Brickcom]' is down, Thu Jan 1 04:31:08 2009
LOG_INFO-stream :Channel [1] started streaming to host '[169.254.209.198]', Thu Jan 1 04:31:52 2009
LOG_INFO-stream :Channel [1] stopped streaming to host '[169.254.209.198]', Thu Jan 1 04:33:06 2009
LOG_INFO-stream :Channel [1] stopped streaming to host '[169.254.209.198]', Thu Jan 1 04:35:54 2009
```

This page displays the system's log in chronological order. The system log is stored in the camera's buffer area and will be overwritten when the buffer area is full.

Click **Retrieve** to retrieve the log or click **Save to file** to save the system log.

Remote Logging

System Log	Remote Logging
Enabled	<input type="checkbox"/>
IP Address	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> Port <input type="text" value="514"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

The user can configure the camera to send the system log file to a remote server as a log backup.

Click to enable remote log and enter the IP address of the remote server.

Enter the port number of the remote server.

Click **Apply** to apply settings or **Cancel** to cancel changes.



Date and Time

Manual – Manually enter the date and time.

Clone from PC – The camera will sync with the time, date and time zone of the computer used to modify the camera settings. Check “Clone” to utilize this option. The read-only date and time of the PC will be displayed.

NTP – (Network Time Protocol) - NTP is a protocol for synchronizing the clocks of a computer system. Select to update the time with a NTP server on an hourly, daily, weekly, or monthly basis.

Time Zone – Select the local time zone from drop-down menu.

NTP Server 1 and Server 2 - Enter the address of the NTP server

Daylight Saving - Enable this option to automatically update for Daylight Savings Time.

Date and Time	
<input type="radio"/> Manual	Year <input type="text" value="2009"/> Month <input type="text" value="1"/> Day <input type="text" value="1"/> Hour <input type="text" value="0"/> Minute <input type="text" value="0"/> Second <input type="text" value="0"/>
<input checked="" type="radio"/> Clone from PC	Year <input type="text" value="2010"/> Month <input type="text" value="8"/> Day <input type="text" value="3"/> Hour <input type="text" value="17"/> Minute <input type="text" value="27"/> Second <input type="text" value="33"/> <input type="checkbox"/> Clone
<input type="radio"/> NTP	TimeZone <input type="text" value="(GMT+8)HONG KONG"/> <input type="button" value="v"/> NTP Server 1 <input type="text" value="tick.stdtime.gov.tw"/> NTP Server 2 <input type="text" value="clock.stdtime.gov.tw"/> Daylight Saving <input type="checkbox"/> Enabled

Click **Apply** to apply settings or **Cancel** to cancel changes.

Device Information

System Information – Displays the complete system information of the camera.

System Information	Network Settings	Video/Audio Settings	Client Information
LAN MAC Address	00:26:82:B6:3C:7B		
Firmware Version	v3.1.0.2		
Product Name	CB-100Ap		
Hardware Version	V2		
Company Name	Brickcom Corporation		
UPnP Name	CB-100Ap-3c7b		

Network Settings –Displays the complete network settings information of the camera.

System Information	Network Settings	Video/Audio Settings	Client Information
IP Information			
IP Setting Type	DHCP		
IP Address	192.168.1.21		
Subnet Mask	255.255.255.0		
Default Gateway	192.168.1.2		
Primary DNS	192.168.1.2		
Secondary DNS	192.168.1.2		
Network Services			
UPnP	Enabled		
DynDNS	Disabled		
TZO	Disabled		
NO-IP	Disabled		

Video/Audio Settings –Displays the complete video/audio settings information of the camera.



System Information		Network Settings		Video/Audio Settings		Client Information	
Stream 1							
Video Codec	H.264						
Video Resolution	1920x1080						
Video Frame Rate	25 fps						
Video Bitrate	4000 Kbps						
Audio Codec	N/A						
Multicast IP	N/A						
Stream 2							
Video Codec	N/A						
Video Resolution	N/A						
Video Frame Rate	N/A						
Video Quality	N/A						
Audio Codec	N/A						
Multicast IP	N/A						
Stream 3							
Video Codec	N/A						
Video Resolution	N/A						
Video Frame Rate	N/A						
Video Bitrate	N/A						
Audio Codec	N/A						
Multicast IP	N/A						



Wireless(*) - Displays the complete wireless information of the camera.

System Information	Network Settings	Video/Audio Settings	Wireless
Wireless MAC Address	00:26:82:1B:DB:92		
Radio Band	Auto-20/40MHz Channel		
Network Mode	BGN-Mixed		
Security	Disabled		
Network Name (SSID)	Brickcom_MARS		
Wireless Channel	6		
Wireless Signal Strength	85%		
Status	Connected		

Client Information- Displays the RTSP Client .You will see a list of RTSP clients with the following information: IP Address and channel.

System Information	Network Settings	Video/Audio Settings	Client Information
Index	IP Address	Channel	
	<input type="button" value="Refresh"/>		



Storage Management (*)

Storage Management is used to view all the recorded files on the Micro-SD/SDHC card.

The screenshot shows the 'Storage Management' interface. At the top, there are two tabs: 'Storage Management' (selected) and 'Advanced Settings'. Below the tabs is a table titled 'Local Storage Information' with the following data:

Item	SD Card
Total Capacity	7.41GB
Used Space	2.27GB
Available Space	5.14GB

Below the table is a 'Memory Card Management' section with three buttons: 'Reload', 'Remove', and 'Format'. To the right of these buttons is a file list showing a folder named 'sd' containing four sub-folders: 'offline', 'schedule', 'snapshot', and 'videoclip'. The left side of the interface has a 'Storage Management' label.

Click **Reload** to refresh the list of recorded files.

Click **Remove** to safely remove the Micro-SD/SDHC memory card.

Click **Format** to format the Micro-SD/SDHC memory card.

Left click on the folder to list the recorded files. The user can either play the snapshot of the recorded files by moving the mouse pointer over the file or double click on a file to play it.

Right click on the folder to download, play or delete the recorded files.

 **NOTE** – The user may need to install QuickTime multimedia framework to play the video clips.

Advanced Settings

Storage Management		Advanced Settings	
Automatic Recycle			
Enable	<input checked="" type="checkbox"/>		
Offline Record			
Enable	<input type="checkbox"/>		
File Encryption			
Enable	<input type="checkbox"/>		
Password	<input type="text"/>		
Encryption Ciphers	AES128		

If the Automatic Recycle function is disabled, there must be at least 50MB Hard Drive space available for the network camera to record video.

If the Automatic Recycle function is enabled, it will automatically overwrite the recorded files when the available space remaining is less than 100MB.

Automatic Recycle (*) – Enable to automatically overwrite older files when the available space remaining on the Micro-SD/SDHC card is less than 100MB. If the Automatic Recycle function is disabled, there must be at least 50MB hard drive space available for the camera to be able to record video files.

Offline Record – Enable to keep recording if the Network Camera is offline.

File Encryption – Enable the File Encryption to encrypt recorded video files. Files are encrypted using OPENSSSL.

To unlock the encrypted file, please download and install the OPENSSSL toolkit from the OPENSSSL Web site.

<http://gnuwin32.sourceforge.net/packages/openssl.htm>

Use the following command to encrypted file:

```
openssl enc -ciphername [-in filename] [-out filename] [-pass arg] [-e] [-d] [-a/-base64] [-A] [-k password] [-kfile filename] [-K key] [-iv IV] [-S salt] [-salt] [-nosalt] [-z] [-md] [-p] [-P] [-bufsize
```


number] [-nopad] [-debug] [-none] [-engine id]

For example: openssl enc -d -aes128 -in encryptfile -out decryptfile -k password

Click **Apply** to apply settings or **Cancel** to cancel changes.

LED Indicators

The LED on the front of the camera can be configured to remain unlit. Check “OFF” to enable this function.

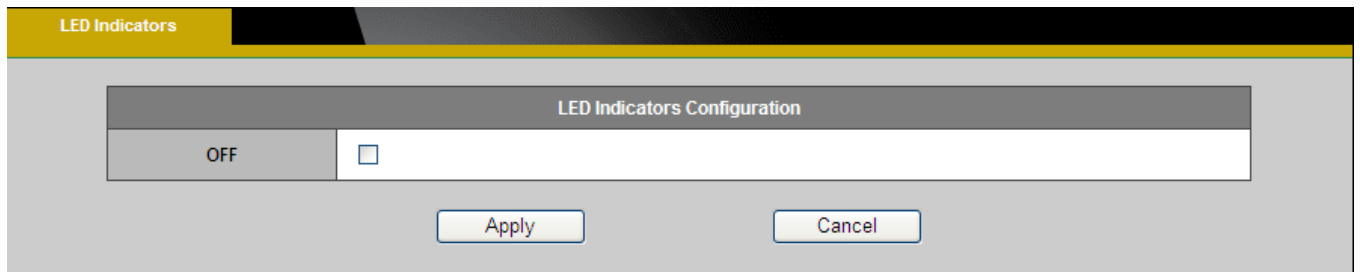

The screenshot shows a configuration window titled "LED Indicators Configuration" with a yellow header bar labeled "LED Indicators". Inside the window, there is a label "OFF" next to an unchecked checkbox. Below the checkbox are two buttons: "Apply" and "Cancel".


Click **Apply** to apply settings or **Cancel** to cancel changes.



Maintenance


User Management

This section explains how to enable password protection and create multiple accounts.

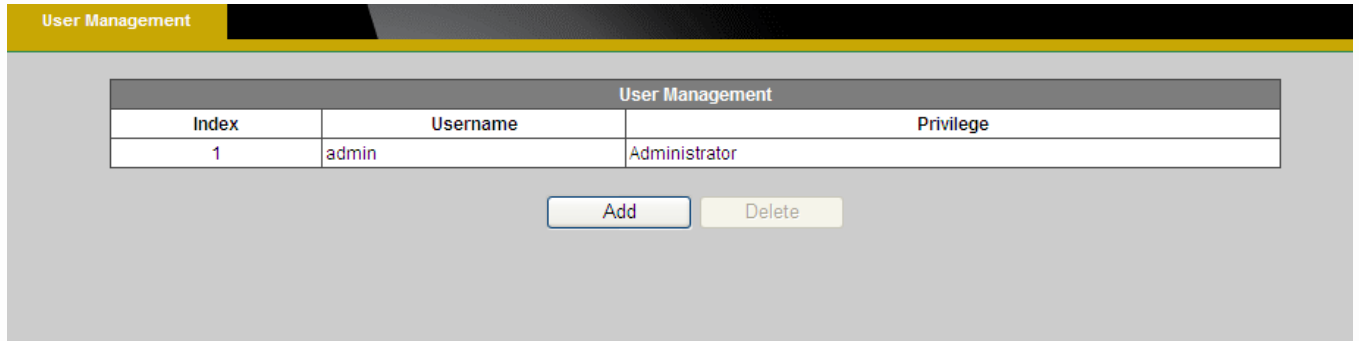

The administrator account name is “admin”, which is permanent and cannot be deleted.

Click **Add** to create an account.

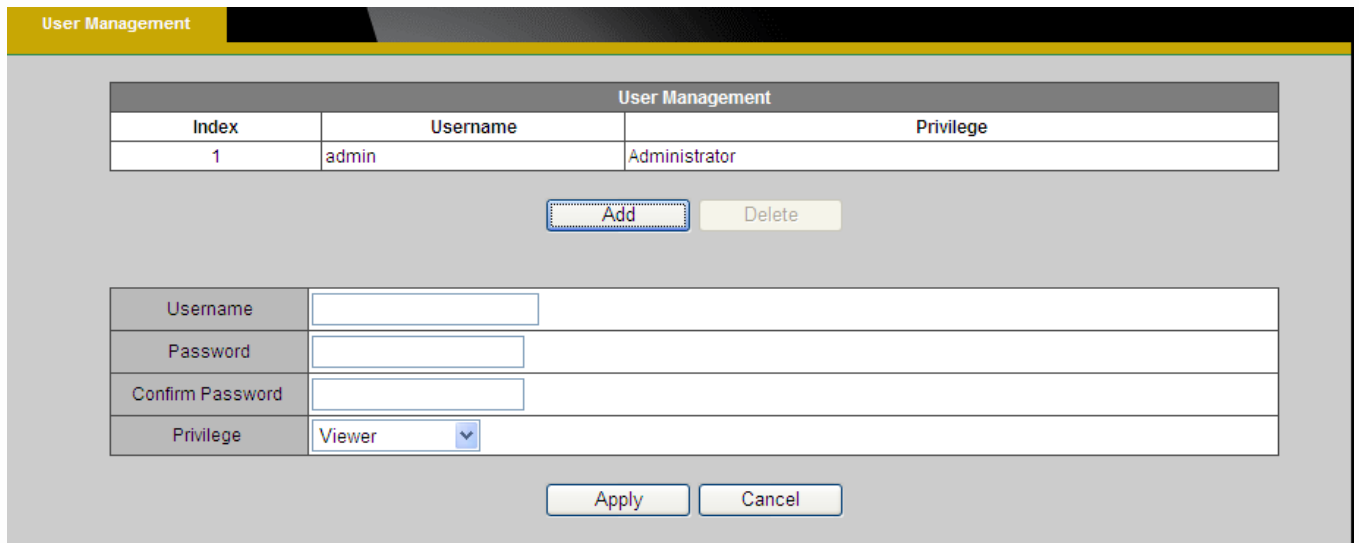


Enter the new user’s name, password and confirm password. Administrators can add up to 10 user accounts.

Select the privilege level for the new user account from the drop-down list. Privilege levels can be assigned as:

- ◆ Administrator - user has access to view and change the Configuration page. Users with administrator privilege can change other user's access rights and delete user accounts. Click **Delete** or **Update** to delete or modify a user's account.
- ◆ Viewer - user can only access the main page for live viewing.
- ◆ Remote Viewer - user can only access the main page for live viewing using TCP protocol.

Language

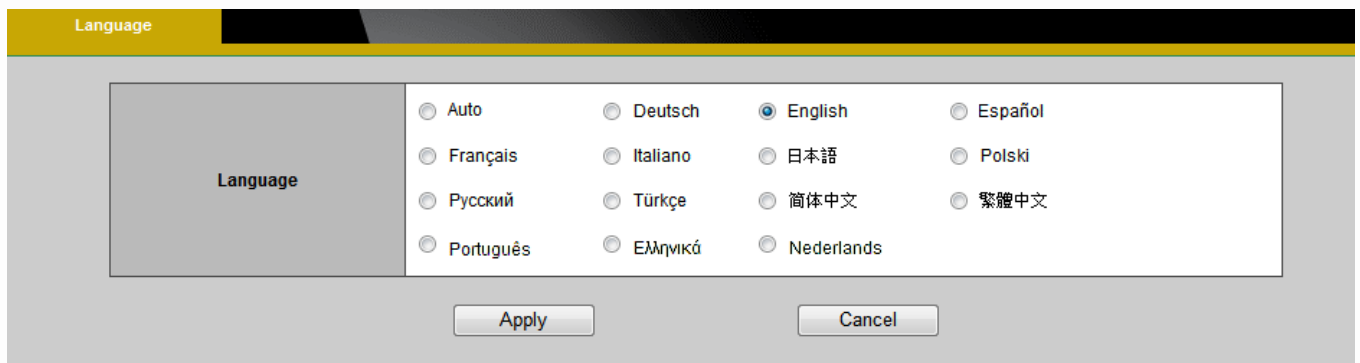

Select the desired language from the radio button.


Click **Apply** to apply settings or **Cancel** to cancel changes.

IP Filter

The IP Filter is used to filter the IP addresses which are able to access the network camera.

Enable the IP Filter and select to allow or deny a range of IP addresses access to the server.

Click **Add to list** to add the IP range to the IP filter list.

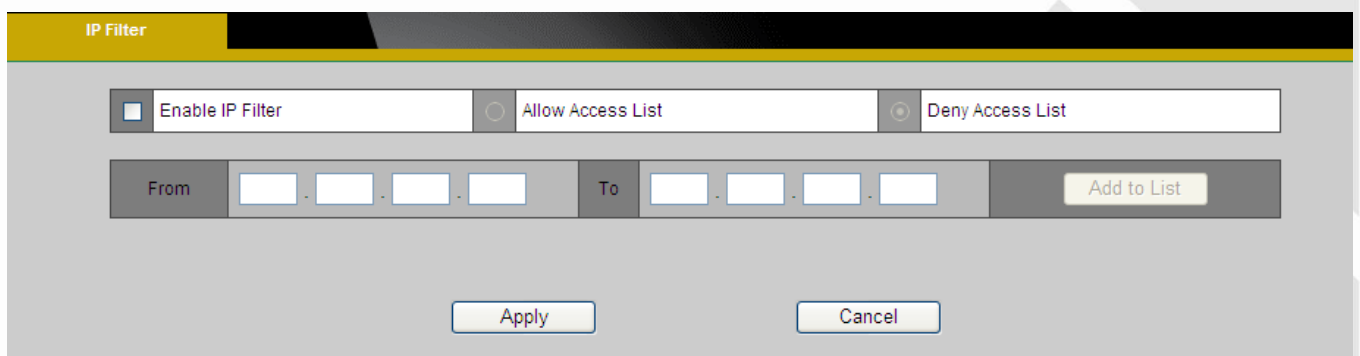

Click **Apply** to apply settings or **Cancel** to cancel changes.

Firmware Upgrade

This feature allows the user to upgrade the camera firmware. It will take a few minutes to complete the process.




NOTE - Do not power off the camera or camera during the upgrade.

Upgrade - Click **Browse...** and specify the firmware file. Click **Upgrade**. The camera will begin upgrading and will reboot automatically when the upgrade is finished.

The screenshot shows a web interface for firmware upgrade. At the top, there is a yellow header with the text 'Firmware Upgrade'. Below the header is a grey form area. On the left side of the form is a button labeled 'Select a File'. To its right is a white text input field. Further right is a button labeled 'Browse...'. On the far right of the form is a button labeled 'Upgrade'.

The following message will show during the firmware upgrading process.

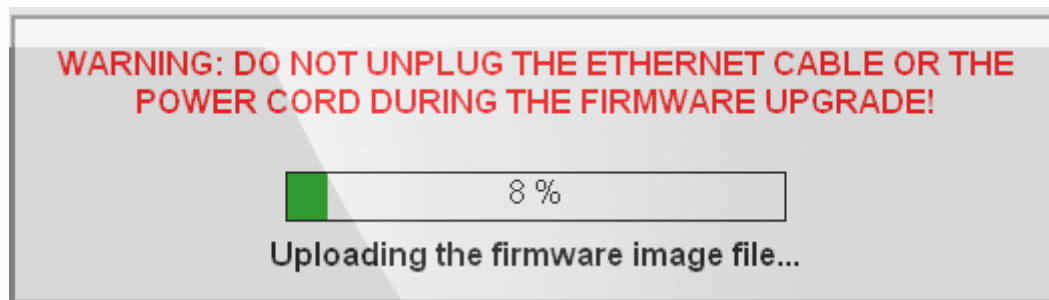

Configuration

This feature allows the user to export/import the configuration files of the network camera.

Import/Export - Click **export** to pop up a dialog to indicate the location and file to export. Click **browse** to indicate the location and file of the camera configuration and click **import** to import the configuration file back into the network camera.


Import / Export

Export	<input type="button" value="Export"/>
Import	Please select a file to import <input type="text"/> <input type="button" value="Browse..."/>
	<input type="button" value="Import"/>




Reset to Default


This section is used to restore the camera to default factory settings. Check the boxes to preserve the IP, Wireless, Date and Time, EasyLink, or Language settings. Click **Apply** to restore the camera to default factory settings.

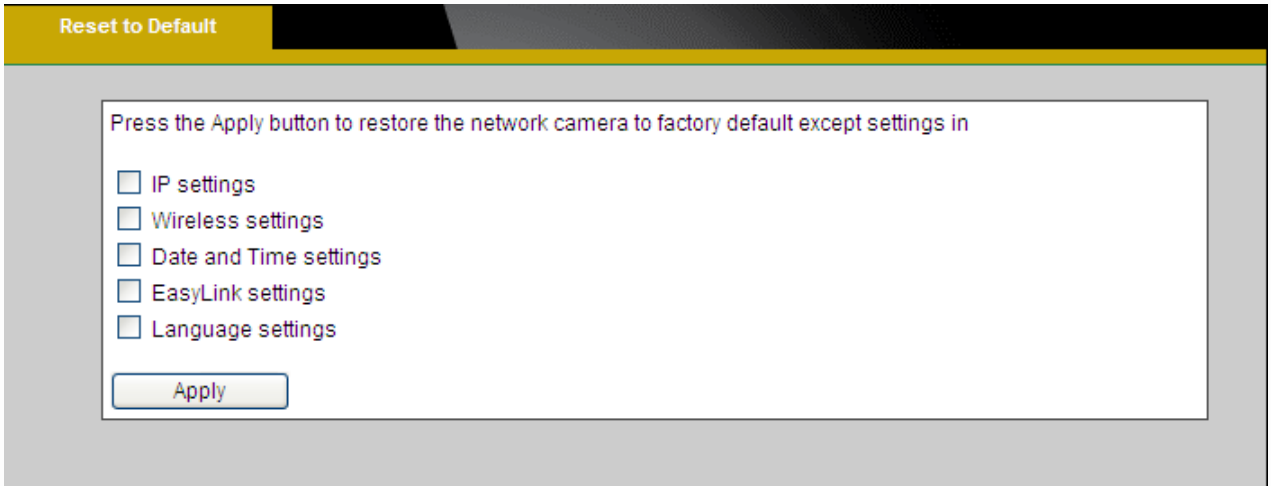


Reboot

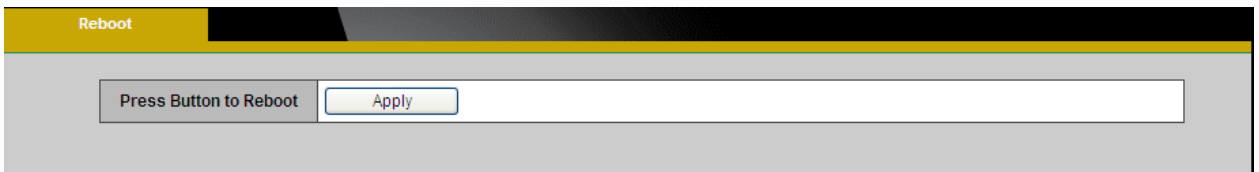

This feature will reboot the camera. Click **Apply** to begin. A message will pop up asking “The device will reboot. Are you sure?” Click “OK” to continue. The camera will take about one minute to reboot.

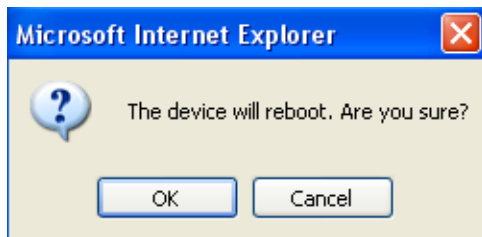

 The following message will show during the rebooting process.



When completed, the live video page will be displayed in the web browser.